


Compressible Flow - TME085

Chapter 3

Niklas Andersson

Chalmers University of Technology
Department of Mechanical Engineering
Division of Fluid Mechanics
Gothenburg, Sweden


`niklas.andersson@chalmers.se`

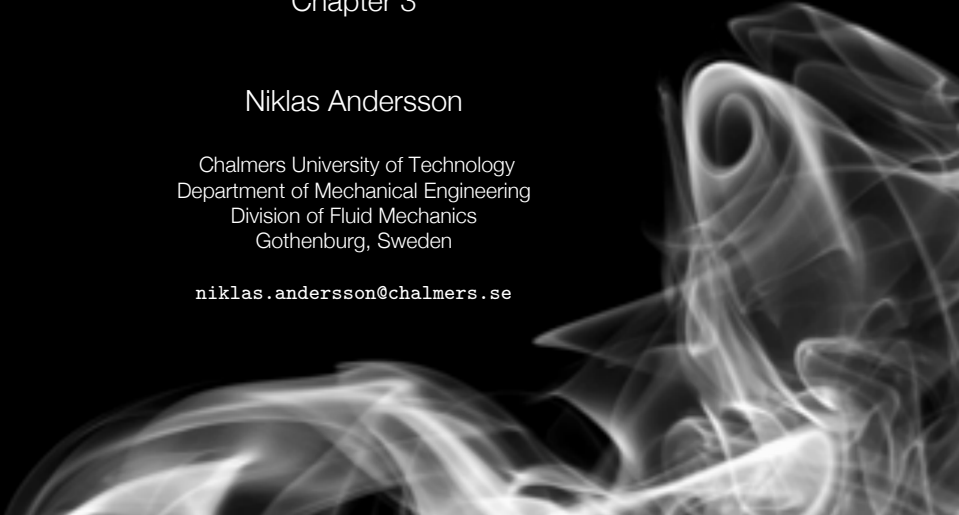



Chapter 3 - One-Dimensional Flow

Overview

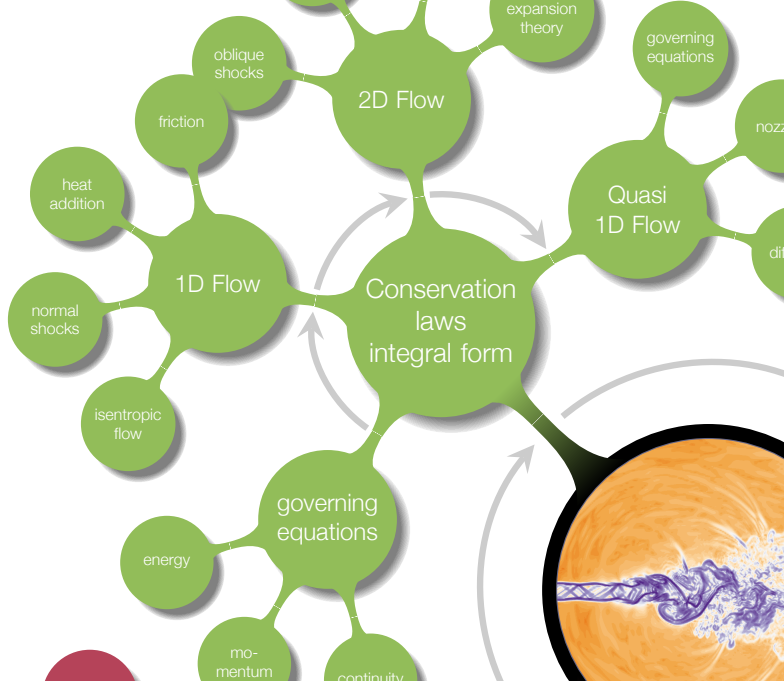


Learning Outcomes

- 4 **Present** at least two different formulations of the governing equations for compressible flows and **explain** what basic conservation principles they are based on
- 5 **Explain** how thermodynamic relations enter into the flow equations
- 6 **Define** the special cases of calorically perfect gas, thermally perfect gas and real gas and **explain** the implication of each of these special cases
- 8 **Derive** (marked) and **apply** (all) of the presented mathematical formulae for classical gas dynamics
 - a 1D isentropic flow*
 - b normal shocks*
 - c 1D flow with heat addition*
 - d 1D flow with friction*

one-dimensional flows - isentropic and non-isentropic

Roadmap - One-dimensional Flow

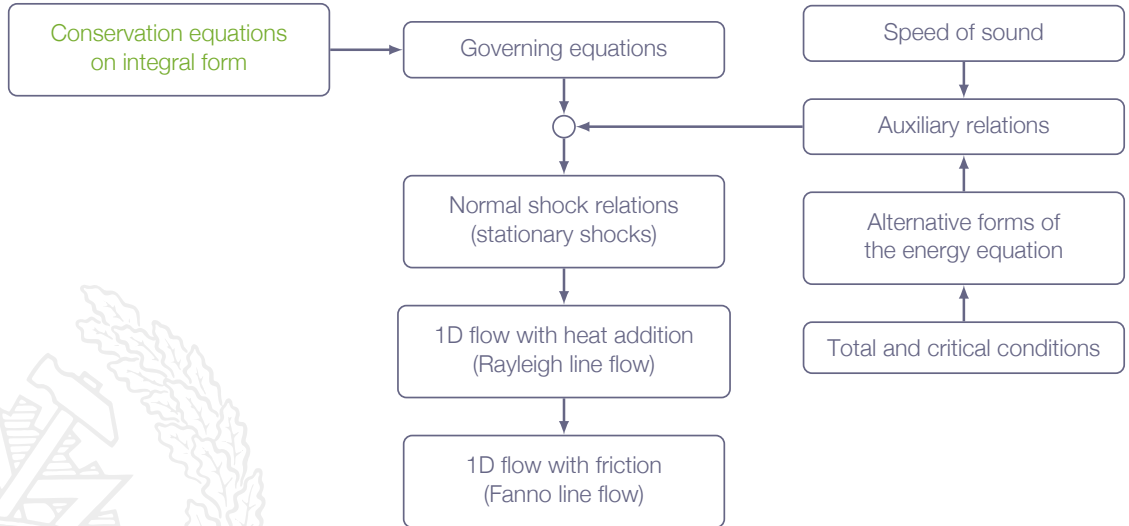

Motivation

Why one-dimensional flow?


many practical problems can be analyzed using a one-dimensional flow approach

a one-dimensional approach addresses the physical principles without adding the complexity of a full three-dimensional problem

the one-dimensional approach is a subset of the full three-dimensional counterpart



Roadmap - One-dimensional Flow

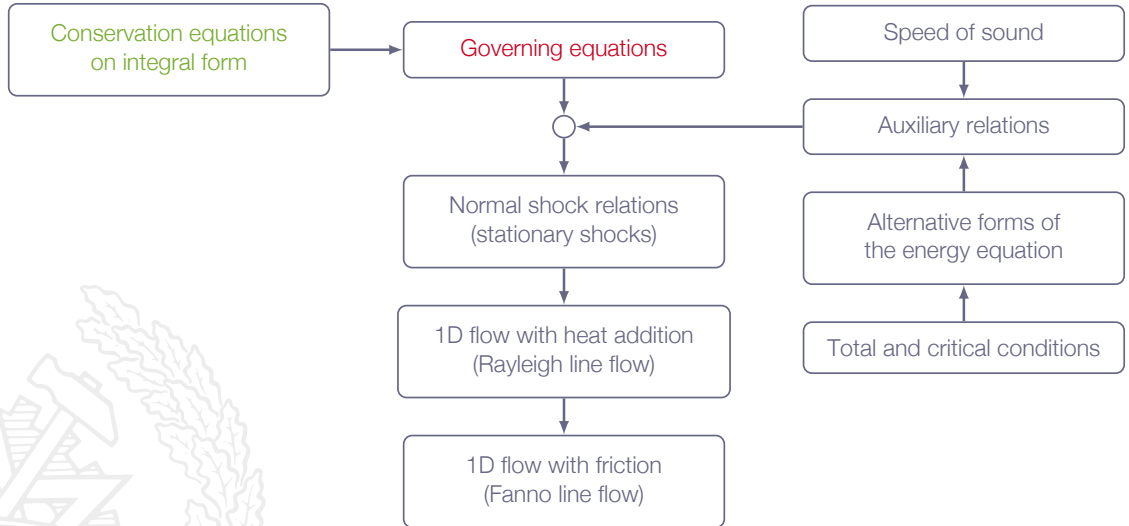

Chapter 3.2


One-Dimensional Flow Equations




One-Dimensional Flow Equations

Problems analyzed using the one-dimensional flow equations can be divided in to two categories:

1. problems with **wave solutions** (discontinuous)
 - acoustic wave
 - normal shock
2. problems with **continuous solutions**
 - flow with heat addition
 - flow with friction

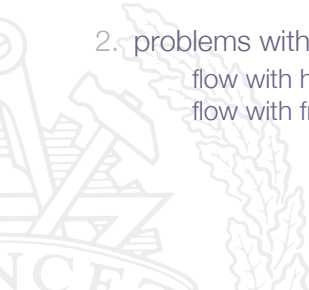


One-Dimensional Flow Equations

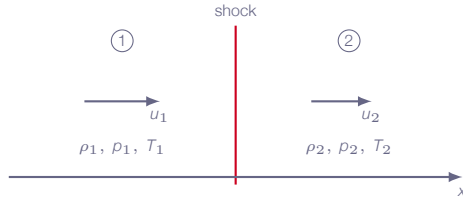

Assumptions:

- all flow variables only depend on x
- velocity aligned with x -axis

One-Dimensional Flow Equations

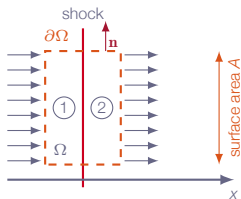

Control volume approach:

Define a rectangular control volume around shock, with upstream conditions denoted by 1 and downstream conditions by 2

One-Dimensional Flow Equations

Conservation of mass:

$$\underbrace{\frac{d}{dt} \iiint_{\Omega} \rho d\mathcal{V}}_{=0} + \underbrace{\oint_{\partial\Omega} \rho \mathbf{v} \cdot \mathbf{n} dS}_{\rho_2 u_2 A - \rho_1 u_1 A} = 0 \Rightarrow \rho_1 u_1 = \rho_2 u_2$$

Conservation of momentum:

$$\underbrace{\frac{d}{dt} \iiint_{\Omega} \rho \mathbf{v} d\mathcal{V}}_{=0} + \underbrace{\oint_{\partial\Omega} [\rho (\mathbf{v} \cdot \mathbf{n}) \mathbf{v} + p \mathbf{n}] dS}_{(\rho_2 u_2^2 + p_2)A - (\rho_1 u_1^2 + p_1)A} = 0 \Rightarrow \rho_1 u_1^2 + p_1 = \rho_2 u_2^2 + p_2$$

One-Dimensional Flow Equations

Conservation of energy:

$$\underbrace{\frac{d}{dt} \iiint_{\Omega} \rho e_o d\mathcal{V}}_{=0} + \underbrace{\oint_{\partial\Omega} [\rho h_o \mathbf{v} \cdot \mathbf{n}] dS}_{\rho_2 h_{o2} u_2 A - \rho_1 h_{o1} u_1 A} = 0 \Rightarrow \rho_1 u_1 h_{o1} = \rho_2 u_2 h_{o2}$$

Using the continuity equation this reduces to

$$h_{o1} = h_{o2}$$

or, if written out

$$h_1 + \frac{1}{2}u_1^2 = h_2 + \frac{1}{2}u_2^2$$

One-Dimensional Flow Equations

Summary:

$$\rho_1 u_1 = \rho_2 u_2$$

$$\rho_1 u_1^2 + p_1 = \rho_2 u_2^2 + p_2$$

$$h_1 + \frac{1}{2}u_1^2 = h_2 + \frac{1}{2}u_2^2$$

Note! These equations are valid regardless of whether or not there is a shock inside the control volume

One-Dimensional Flow Equations

Summary:

$$\rho_1 u_1 = \rho_2 u_2$$

$$\rho_1 u_1^2 + p_1 = \rho_2 u_2^2 + p_2$$


$$h_1 + \frac{1}{2}u_1^2 = h_2 + \frac{1}{2}u_2^2$$

Valid for all gases!

General gas $\Rightarrow$ Numerical solution necessary

Calorically perfect gas $\Rightarrow$ Can be solved analytically

Roadmap - One-dimensional Flow

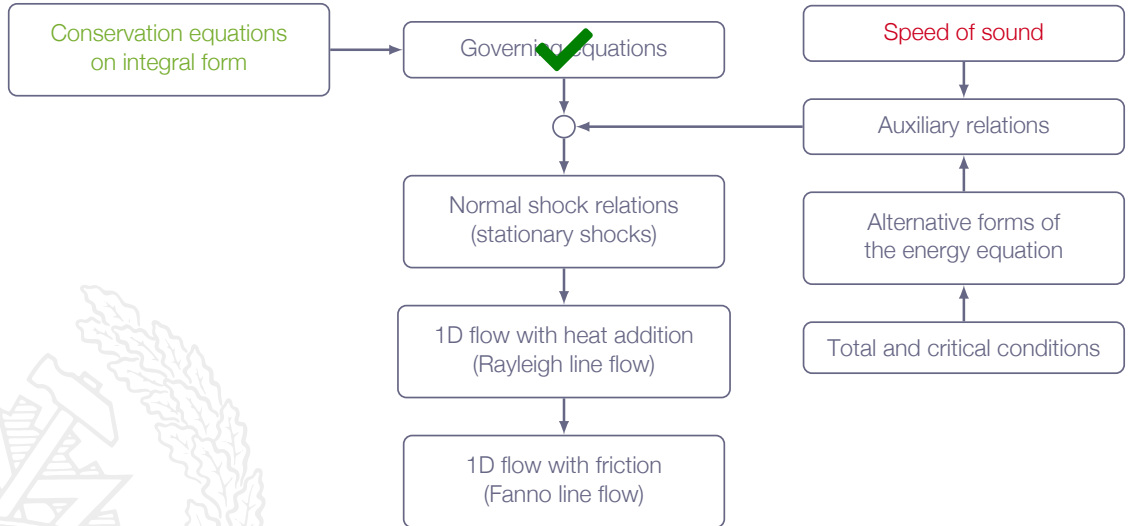


Chapter 3.3

Speed of Sound and Mach Number



Speed of Sound

Sound wave / acoustic perturbation

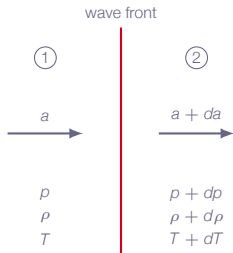

Speed of Sound

Conservation of mass gives

$$\rho a = (\rho + d\rho)(a + da) = \rho a + \rho da + d\rho a + d\rho da$$

products of infinitesimal quantities are removed $\Rightarrow$

$$\rho da + d\rho a = 0$$

solve for $da \Rightarrow$

$$da = -a \frac{d\rho}{\rho}$$

Speed of Sound

The momentum equation evaluated over the wave front gives

$$p + \rho a^2 = (p + dp) + (\rho + d\rho)(a + da)^2$$

Again, removing products of infinitesimal quantities gives

$$dp = -2a\rho da - a^2 d\rho$$

Solve for $da \Rightarrow$

$$da = \frac{dp + a^2 d\rho}{-2a\rho}$$

Speed of Sound

Continuity equation:

$$da = -a \frac{d\rho}{\rho}$$

Momentum equation:

$$da = \frac{dp + a^2 d\rho}{-2a\rho}$$

$$-a \frac{d\rho}{\rho} = \frac{dp + a^2 d\rho}{-2a\rho} \Rightarrow a^2 = \frac{dp}{d\rho}$$



Speed of Sound

Sound waves are **small perturbations** in ρ , $\mathbf{v}$, p , T (with constant entropy s) propagating through gas with speed a

$$a^2 = \left(\frac{\partial p}{\partial \rho} \right)_s$$

(valid for all gases)



Speed of Sound

Compressibility and speed of sound:

from before we have

$$\tau_s = \frac{1}{\rho} \left(\frac{\partial \rho}{\partial p} \right)_s$$

insert in relation for speed of sound

$$a^2 = \left(\frac{\partial p}{\partial \rho} \right)_s = \frac{1}{\rho \tau_s} \Rightarrow a = \sqrt{\frac{1}{\rho \tau_s}}$$

(valid for all gases)

Speed of Sound

Calorically perfect gas:

Isentropic process $\Rightarrow p = C\rho^\gamma$ (where C is a constant)

$$a^2 = \left(\frac{\partial p}{\partial \rho} \right)_s = \gamma C \rho^{\gamma-1} = \frac{\gamma p}{\rho}$$

which implies

$$a = \sqrt{\frac{\gamma p}{\rho}} \Rightarrow a = \sqrt{\gamma R T}$$

Speed of Sound

Sound wave / acoustic perturbation:

a **weak wave**

propagating through gas at **speed of sound**

small perturbations in velocity and thermodynamic properties

isentropic process



Mach Number

The mach number, M , is a local variable

$$M = \frac{v}{a}$$

where

$$v = |\mathbf{v}|$$

and a is the local speed of sound

In the free stream, far away from solid objects, the flow is undisturbed and denoted by subscript ∞

$$M_{\infty} = \frac{v_{\infty}}{a_{\infty}}$$

Mach Number

For a fluid element moving along a streamline, the kinetic energy per unit mass and internal energy per unit mass are $V^2/2$ and e , respectively

$$\frac{V^2/2}{e} = \frac{V^2/2}{C_v T} = \frac{V^2/2}{RT/(\gamma - 1)} = \frac{(\gamma/2)V^2}{a^2/(\gamma - 1)} = \frac{\gamma(\gamma - 1)}{2} M^2$$




i.e. the Mach number is a measure of the ratio of the **fluid motion** (kinetic energy) and the **random thermal motion** of the molecules (internal energy)

Physical Consequences of Speed of Sound


Sound waves is the way gas molecules convey information about what is happening in the flow

In subsonic flow, sound waves are able to travel upstream, since $v < a$


In supersonic flow, sound waves are unable to travel upstream, since $v > a$

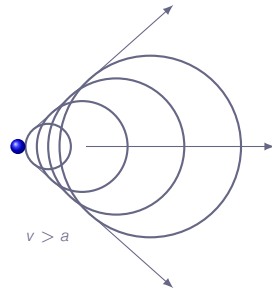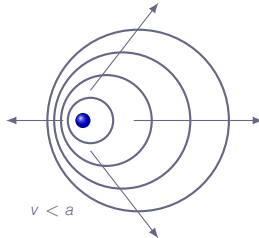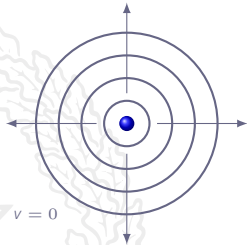

Physical Consequences of Speed of Sound

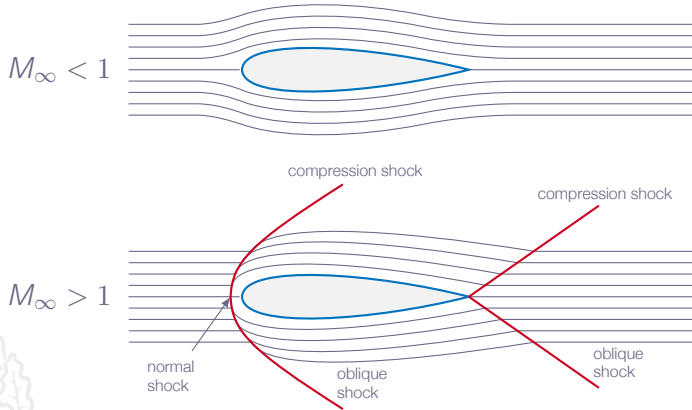

Roadmap - One-dimensional Flow

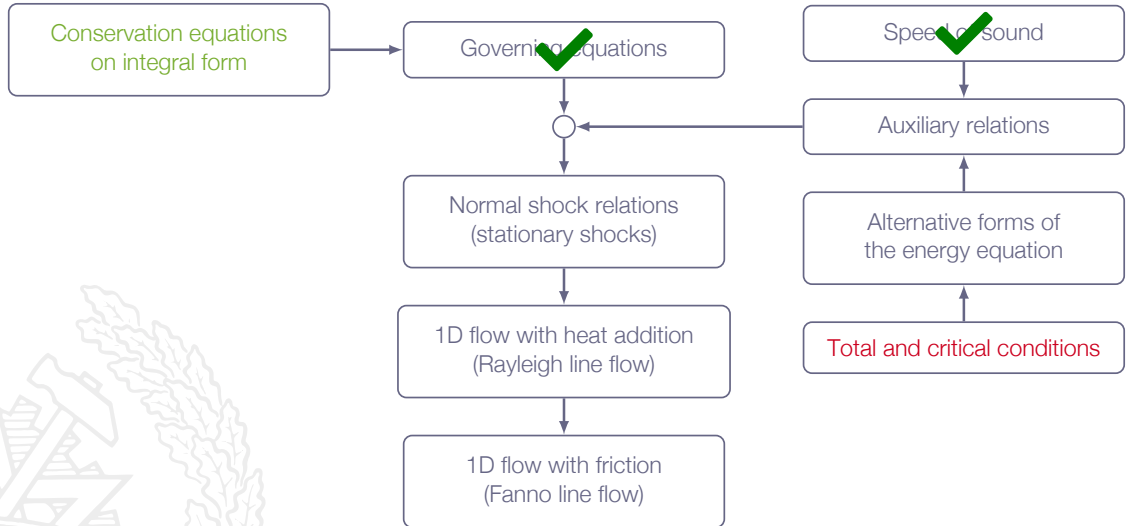

Chapter 3.4

Some Conveniently Defined Flow Parameters



Stagnation Flow Properties

Assumption: Steady inviscid flow

If the flow is slowed down **isentropically** (without flow losses) to **zero velocity** we get the so-called **total conditions** (or stagnation flow properties)

(e.g. total pressure p_o , total temperature T_o , total density ρ_o , and total speed of sound a_o)

Since the process is isentropic, we have (for calorically perfect gas)

$$\frac{p_o}{p} = \left(\frac{\rho_o}{\rho} \right)^\gamma = \left(\frac{T_o}{T} \right)^{\frac{\gamma}{\gamma-1}}$$

Note! T_o and a_o only requires an adiabatic deceleration process

Critical Conditions

If the flow is accelerated/decelerated **isentropically** to the **sonic point**, where $v = a$, we obtain the so-called **critical conditions**, e.g. ρ^* , T^* , ρ^* , a^*

where, by definition, $v^* = a^*$

As for the total conditions, if the process is also reversible (entropy is preserved) we obtain the relations (for calorically perfect gas)

$$\frac{\rho^*}{\rho_o} = \left(\frac{\rho^*}{\rho_o} \right)^\gamma = \left(\frac{T^*}{T_o} \right)^{\frac{\gamma}{\gamma-1}}$$

Note! T^* and a^* only requires an adiabatic acceleration/deceleration process

Total and Critical Conditions

For any given steady-state flow and location, we may think of an **imaginary** isentropic/adiabatic stagnation process or sonic flow process and thus

We can obtain **total** and **critical** conditions at **any point** in a flow

The total/critical conditions represent conditions realizable under an isentropic/adiabatic deceleration or acceleration of the flow

In an adiabatic flow, T_o is conserved along streamlines

Conservation of p_o along streamlines requires that the flow is isentropic (no viscous losses or shocks)

Total and Critical Conditions

Note! The actual flow does not have to be adiabatic or isentropic from point to point, the total and critical conditions are results of an imaginary isentropic/adiabatic process at one point in the flow.

However, with isentropic flow T_o , p_o , ρ_o , etc are constants

In order for T_o to be constant it is only required that the flow is adiabatic.



Total and Critical Conditions

If A and B are two locations in a flow

1. Isentropic flow:

$$T_{oA} = T_{oB} \text{ and } p_{oA} = p_{oB}$$


2. Adiabatic flow (not isentropic):

$$T_{oA} = T_{oB} \text{ and } p_{oA} \neq p_{oB}$$

3. The flow is not isentropic nor adiabatic:

$$T_{oA} \neq T_{oB} \text{ and } p_{oA} \neq p_{oB}$$

Roadmap - One-dimensional Flow

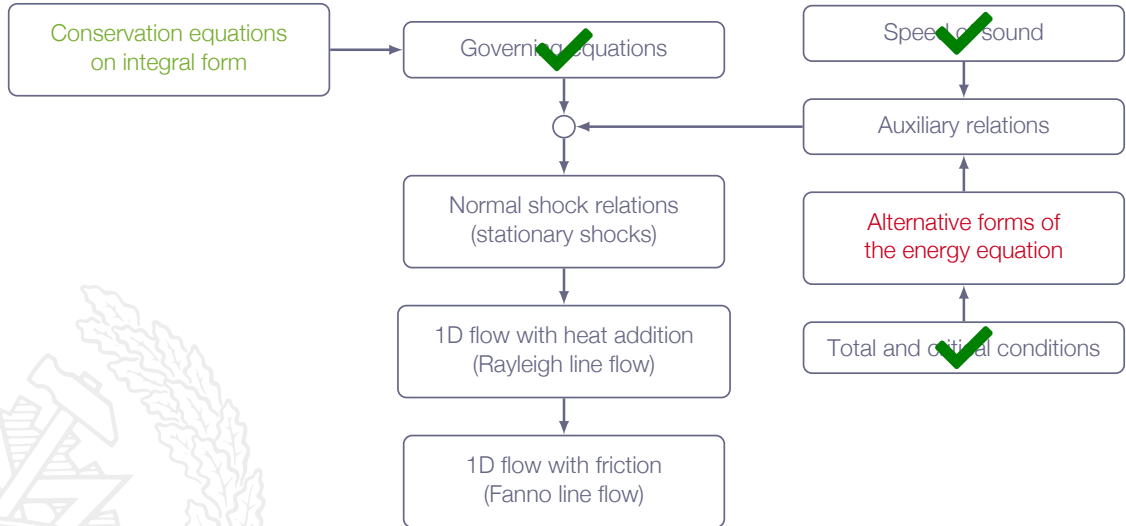

Chapter 3.5

Alternative Forms of the Energy Equation



Alternative Forms of the Energy Equation

For steady-state adiabatic flow, we have already shown that conservation of energy gives that total enthalpy, h_o , is constant along streamlines

For a calorically perfect gas we have $h = C_p T$ which implies

$$C_p T + \frac{1}{2} v^2 = C_p T_o$$

$$\frac{T_o}{T} = 1 + \frac{v^2}{2C_p T}$$

Inserting $C_p = \frac{\gamma R}{\gamma - 1}$ and $a^2 = \gamma R T$ we get

$$\frac{T_o}{T} = 1 + \frac{1}{2}(\gamma - 1)M^2$$

Alternative Forms of the Energy Equation

For calorically perfect gas (1D/2D/3D flows):

$$\frac{T_o}{T} = 1 + \frac{1}{2}(\gamma - 1)M^2$$

$$\frac{\rho_o}{\rho} = \left(\frac{T_o}{T}\right)^{\frac{1}{\gamma-1}}$$

$$\frac{p_o}{p} = \left(\frac{T_o}{T}\right)^{\frac{\gamma}{\gamma-1}}$$

$$\left(\frac{a^*}{a_o}\right)^2 = \frac{T^*}{T_o} = \frac{2}{\gamma + 1}$$

$$\frac{\rho^*}{\rho_o} = \left(\frac{2}{\gamma + 1}\right)^{\frac{1}{\gamma-1}}$$

$$\frac{p^*}{p_o} = \left(\frac{2}{\gamma + 1}\right)^{\frac{\gamma}{\gamma-1}}$$

Note! tabulated values for these relations can be found in Appendix A.1

The Characteristic Mach Number

$$M^* \equiv \frac{v}{a^*}$$

For a calorically perfect gas (1D/2D/3D flows)

$$M^2 = \frac{2}{[(\gamma + 1)/M^{*2}] - (\gamma - 1)}$$

This relation between M and M^* gives:

$$M^* = 0 \Leftrightarrow M = 0$$


$$M^* = 1 \Leftrightarrow M = 1$$

$$M^* < 1 \Leftrightarrow M < 1$$

$$M^* > 1 \Leftrightarrow M > 1$$

$$M^* \rightarrow \sqrt{\frac{\gamma + 1}{\gamma - 1}} \text{ when } M \rightarrow \infty$$

Roadmap - One-dimensional Flow

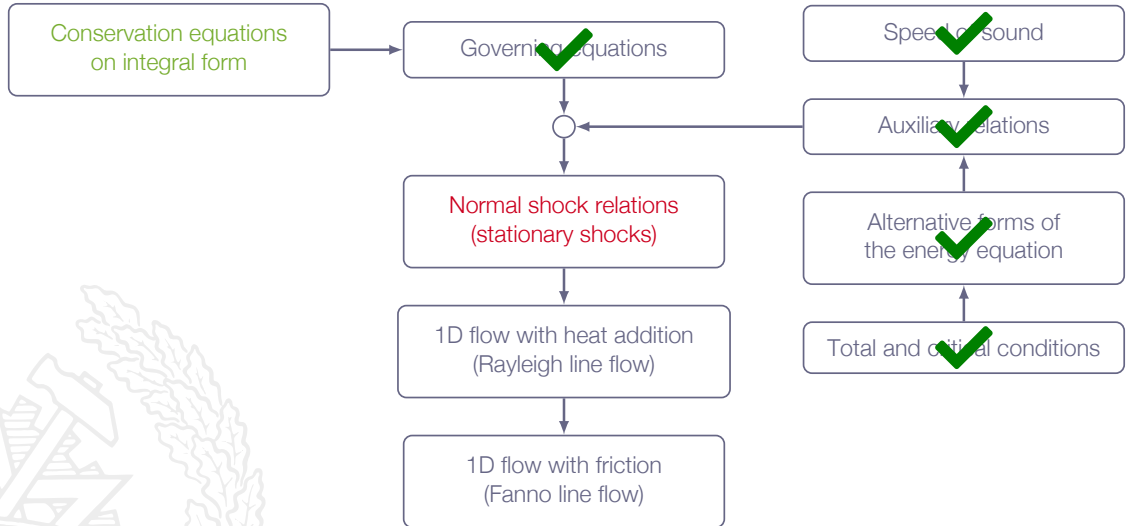

Chapter 3.6

Normal Shock Relations



One-Dimensional Flow Equations

$$\rho_1 u_1 = \rho_2 u_2$$

$$\rho_1 u_1^2 + p_1 = \rho_2 u_2^2 + p_2$$

$$h_1 + \frac{1}{2}u_1^2 = h_2 + \frac{1}{2}u_2^2$$



Normal Shock Relations

Calorically perfect gas

$$h = C_p T, \quad p = \rho R T$$

with constant C_p

Assuming that state 1 is known and state 2 is unknown

5 unknown variables: $\rho_2, u_2, p_2, h_2, T_2$

5 equations

⇒ solution can be found

Normal Shock Relations

Divide the momentum equation by $\rho_1 u_1$

$$\frac{1}{\rho_1 u_1} (p_1 + \rho_1 u_1^2) = \frac{1}{\rho_1 u_1} (p_2 + \rho_2 u_2^2)$$

$$\{\rho_1 u_1 = \rho_2 u_2\} \Rightarrow$$

$$\frac{1}{\rho_1 u_1} (p_1 + \rho_1 u_1^2) = \frac{1}{\rho_2 u_2} (p_2 + \rho_2 u_2^2)$$

$$\frac{\rho_1}{\rho_1 u_1} - \frac{\rho_2}{\rho_2 u_2} = u_2 - u_1$$

Normal Shock Relations

$$\frac{\rho_1}{\rho_1 u_1} - \frac{\rho_2}{\rho_2 u_2} = u_2 - u_1$$

Recall that $a = \sqrt{\frac{\gamma p}{\rho}}$, which gives

$$\frac{a_1^2}{\gamma u_1} - \frac{a_2^2}{\gamma u_2} = u_2 - u_1$$

Now, we will make use of the fact that the flow is adiabatic and thus a^* is constant

Normal Shock Relations

Energy equation:

$$C_p T_1 + \frac{1}{2} u_1^2 = C_p T_2 + \frac{1}{2} u_2^2$$

$$\left\{ C_p = \frac{\gamma R}{\gamma - 1} \right\} \Rightarrow$$

$$\frac{\gamma R T_1}{(\gamma - 1)} + \frac{1}{2} u_1^2 = \frac{\gamma R T_2}{(\gamma - 1)} + \frac{1}{2} u_2^2$$

$$\left\{ a = \sqrt{\gamma R T} \right\} \Rightarrow$$

$$\frac{a_1^2}{(\gamma - 1)} + \frac{1}{2} u_1^2 = \frac{a_2^2}{(\gamma - 1)} + \frac{1}{2} u_2^2$$

Normal Shock Relations

In any position in the flow we can get a relation between the local speed of sound a , the local velocity u , and the speed of sound at sonic conditions a^* by inserting in the equation on the previous slide. $u_1 = u$, $a_1 = a$, $u_2 = a_2 = a^* \Rightarrow$

$$\frac{a^2}{(\gamma - 1)} + \frac{1}{2}u^2 = \frac{a^{*2}}{(\gamma - 1)} + \frac{1}{2}a^{*2}$$

$$a^2 = \frac{\gamma + 1}{2}a^{*2} - \frac{\gamma - 1}{2}u^2$$

Evaluated in station 1 and 2, this gives

$$a_1^2 = \frac{\gamma + 1}{2}a^{*2} - \frac{\gamma - 1}{2}u_1^2$$

$$a_2^2 = \frac{\gamma + 1}{2}a^{*2} - \frac{\gamma - 1}{2}u_2^2$$

Normal Shock Relations

Now, inserting $\left\{a_1^2 = \frac{\gamma+1}{2}a^{*2} - \frac{\gamma-1}{2}u_1^2\right\}$ and $\left\{a_2^2 = \frac{\gamma+1}{2}a^{*2} - \frac{\gamma-1}{2}u_2^2\right\}$

in $\left\{\frac{a_1^2}{(\gamma-1)} + \frac{1}{2}u_1^2 = \frac{a_2^2}{(\gamma-1)} + \frac{1}{2}u_2^2\right\}$ and solve for a^* gives

$$a^{*2} = u_1 u_2$$

Normal Shock Relations

$$a^{*2} = u_1 u_2$$

A.K.A. the Prandtl relation. Divide by a^{*2} on both sides $\Rightarrow$

$$1 = \frac{u_1}{a^*} \frac{u_2}{a^*} = M_1^* M_2^*$$

Together with the relation between M and M^* , this gives

$$M_2^2 = \frac{1 + \frac{1}{2}(\gamma - 1)M_1^2}{\gamma M_1^2 - \frac{1}{2}(\gamma - 1)}$$

Normal Shock Relations

Continuity equation and $a^{*2} = u_1 u_2$

$$\frac{\rho_2}{\rho_1} = \frac{u_1}{u_2} = \frac{u_1^2}{u_1 u_2} = \frac{u_1^2}{a^{*2}} = M_1^{*2}$$

which gives

$$\frac{\rho_2}{\rho_1} = \frac{u_1}{u_2} = \frac{(\gamma + 1)M_1^2}{2 + (\gamma - 1)M_1^2}$$

Normal Shock Relations

Now, once again back to the momentum equation

$$p_2 - p_1 = \rho_1 u_1^2 - \rho_2 u_2^2 = \{\rho_1 u_1 = \rho_2 u_2\} = \rho_1 u_1 (u_1 - u_2)$$

$$\frac{p_2}{p_1} - 1 = \frac{\rho_1 u_1^2}{\rho_1} \left(1 - \frac{u_2}{u_1}\right) = \left\{a = \sqrt{\frac{\gamma p}{\rho}}, M^2 = \frac{u^2}{a^2}\right\} = \gamma M_1^2 \left(1 - \frac{u_2}{u_1}\right)$$

with the expression for u_2/u_1 derived previously, this gives

$$\frac{p_2}{p_1} = 1 + \frac{2\gamma}{\gamma + 1} (M_1^2 - 1)$$

Normal Shock Relations

Are the normal shock relations valid for $M_1 < 1.0$?

Mathematically - yes!

Physically - ?



Normal Shock Relations

Let's have a look at the 2nd law of thermodynamics

$$s_2 - s_1 = C_p \ln \frac{T_2}{T_1} - R \ln \frac{p_2}{p_1}$$

We get the ratios (T_2/T_1) and (p_2/p_1) from the normal shock relations


$$s_2 - s_1 = C_p \ln \left[\left(1 + \frac{2\gamma}{\gamma + 1} (M_1^2 - 1) \right) \left(\frac{2 + (\gamma - 1)M_1^2}{(\gamma + 1)M_1^2} \right) \right] + \\ - R \ln \left(1 + \frac{2\gamma}{\gamma + 1} (M_1^2 - 1) \right)$$

Normal Shock Relations

$M_1 = 1 \Rightarrow \Delta s = 0$ (Mach wave)

$M_1 < 1 \Rightarrow \Delta s < 0$ (not physical)

$M_1 > 1 \Rightarrow \Delta s > 0$

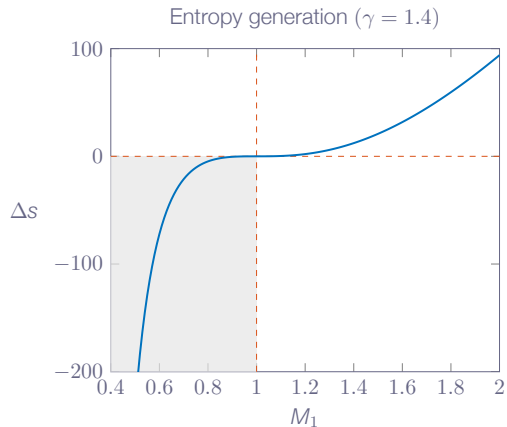

Normal Shock Relations

Normal shock $\Rightarrow M_1 > 1$

$$M_1^* M_2^* = 1$$

$$M_1 > 1 \Rightarrow M_1^* > 1$$

$$M_2^* = \frac{1}{M_1^*} \Rightarrow M_2^* < 1$$

$$M_2^* < 1 \Rightarrow M_2 < 1$$

After a normal shock the Mach number must be lower than 1.0


Normal Shock Relations

$$M_2^2 = \frac{1 + \frac{1}{2}(\gamma - 1)M_1^2}{\gamma M_1^2 - \frac{1}{2}(\gamma - 1)}$$

$$M_1 = 1.0 \Rightarrow M_2 = 1.0$$


$$M_1 > 1.0 \Rightarrow M_2 < 1.0$$

$$M_1 \rightarrow \infty \Rightarrow M_2 \rightarrow \sqrt{(\gamma - 1)/(2\gamma)} = \{\gamma = 1.4\} = 0.378$$

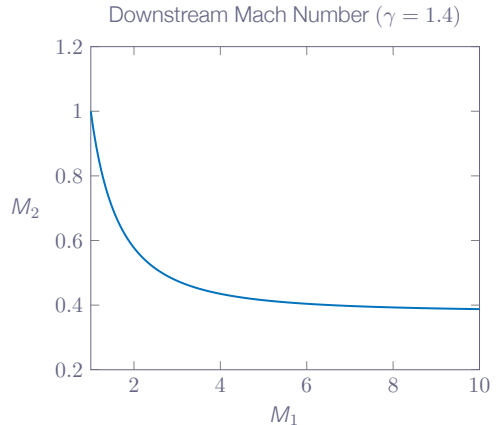

Normal Shock Relations

$$\frac{p_2}{p_1} = 1 + \frac{2\gamma}{\gamma + 1} (M_1^2 - 1)$$

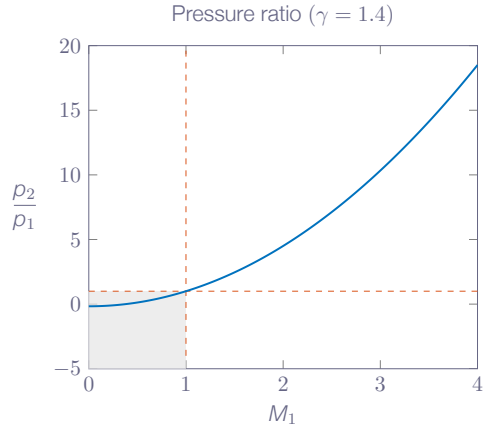

Note! from before we know that M_1 must be greater than 1.0, which means that p_2/p_1 must be greater than 1.0

Normal Shock Relations

$M_1 > 1.0$ gives $M_2 < 1.0$, $\rho_2 > \rho_1$, $p_2 > p_1$, and $T_2 > T_1$

What about T_o and p_o ?

Energy equation: $C_p T_1 + \frac{u_1^2}{2} = C_p T_2 + \frac{u_2^2}{2} \Rightarrow C_p T_{o1} = C_p T_{o2}$

calorically perfect gas $\Rightarrow T_{o1} = T_{o2}$

or more general (as long as the shock is stationary): $h_{o1} = h_{o2}$

Normal Shock Relations

2nd law of thermodynamics and isentropic deceleration to zero velocity (Δs unchanged since isentropic) gives

$$s_2 - s_1 = C_p \ln \frac{T_{o2}}{T_{o1}} - R \ln \frac{p_{o2}}{p_{o1}} = \{T_{o1} = T_{o2}\} = -R \ln \frac{p_{o2}}{p_{o1}}$$

$$\frac{p_{o2}}{p_{o1}} = e^{-(s_2 - s_1)/R}$$

i.e. the total pressure decreases over a normal shock

Normal Shock Relations

Normal shock relations for calorically perfect gas (summary):

$$T_{o1} = T_{o2}$$

$$a_{o1} = a_{o2}$$

$$a_1^* = a_2^* = a^*$$

$$u_1 u_2 = a^{*2} \quad (\text{the Prandtl relation})$$

$$M_2^* = \frac{1}{M_1^*}$$

$$M_2^2 = \frac{1 + \frac{1}{2}(\gamma - 1)M_1^2}{\gamma M_1^2 - \frac{1}{2}(\gamma - 1)}$$

$$\frac{\rho_2}{\rho_1} = 1 + \frac{2\gamma}{\gamma + 1}(M_1^2 - 1)$$

$$\frac{\rho_2}{\rho_1} = \frac{u_1}{u_2} = \frac{(\gamma + 1)M_1^2}{2 + (\gamma - 1)M_1^2}$$


$$\frac{T_2}{T_1} = \frac{\rho_2}{\rho_1} \frac{\rho_1}{\rho_2}$$

Normal Shock Relations

As the flow passes a stationary normal shock, the following changes will take place discontinuously across the shock:

ρ	increases
p	increases
u	decreases
M	decreases (from $M > 1$ to $M < 1$)
T	increases
p_o	decreases (due to shock loss)
s	increases (due to shock loss)
T_o	unaffected

Normal Shock Relations

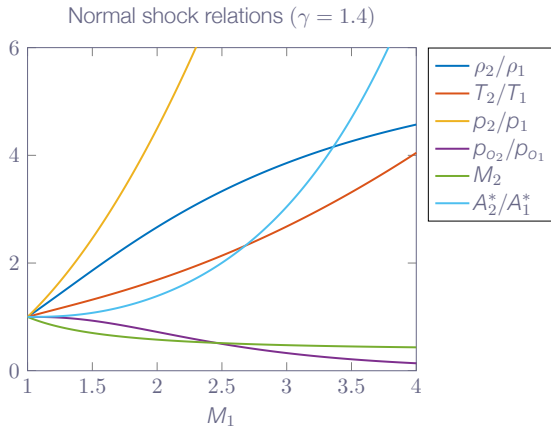

Normal Shock Relations

The normal shock relations for calorically perfect gases are valid for $M_1 \leq 5$ (approximately) for air at standard conditions

Calorically perfect gas $\Rightarrow$ Shock strength depends on M_1 only

Thermally perfect gas $\Rightarrow$ Shock strength depends on M_1 and T_1

General real gas (non-perfect) $\Rightarrow$ Shock strength depends on M_1 , p_1 , and T_1

Normal Shock Relations

And now to the question that probably bothers most of you but that no one dares to ask ...



Normal Shock Relations

And now to the question that probably bothers most of you but that no one dares to ask ...

When or where did we say that there was going to be a shock between 1 and 2?



Normal Shock Relations

And now to the question that probably bothers most of you but that no one dares to ask ...

When or where did we say that there was going to be a shock between 1 and 2?

Answer: We did not (explicitly)



Normal Shock Relations

The derivation is based on the fact that there should be a change in flow properties between 1 and 2



We are assuming steady state conditions

We have said that the flow is adiabatic (no added or removed heat)

There is no work done and no friction added

A normal shock is the solution provided by nature (and math) that fulfill these requirements!

Normal Shocks

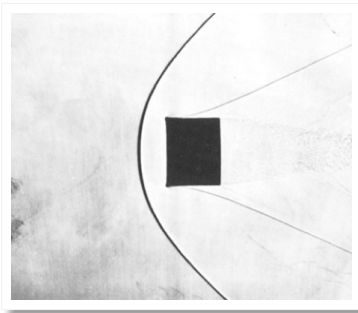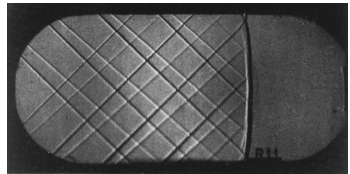

Chapter 3.7

Hugoniot Equation



Hugoniot Equation

Starting point: governing equations for normal shocks

$$\rho_1 u_1 = \rho_2 u_2$$

$$\rho_1 u_1^2 + p_1 = \rho_2 u_2^2 + p_2$$

$$h_1 + \frac{1}{2}u_1^2 = h_2 + \frac{1}{2}u_2^2$$

Eliminate u_1 and u_2 gives:

$$h_2 - h_1 = \frac{p_2 - p_1}{2} \left(\frac{1}{\rho_1} + \frac{1}{\rho_2} \right)$$

Hugoniot Equation

Now, insert $h = e + p/\rho$ gives

$$e_2 - e_1 = \frac{p_2 + p_1}{2} \left(\frac{1}{\rho_1} - \frac{1}{\rho_2} \right) = \frac{p_2 + p_1}{2} (\nu_1 - \nu_2)$$

which is the **Hugoniot relation**

Stationary Normal Shock in One-Dimensional Flow

Normal shock:

$$e_2 - e_1 = -\frac{p_2 + p_1}{2} (\nu_2 - \nu_1)$$

More effective than isentropic process

Gives entropy increase

Isentropic process:

$$de = -pd\nu$$

More efficient than normal shock process

see figure 3.11 p. 100


Stationary Normal Shock in One-Dimensional Flow

The Rankine-Hugoniot relation

$$\frac{\rho_2}{\rho_1} = \frac{1 + \left(\frac{\gamma+1}{\gamma-1}\right) \left(\frac{p_2}{p_1}\right)}{\left(\frac{\gamma+1}{\gamma-1}\right) + \left(\frac{p_2}{p_1}\right)}$$

The isentropic relation


$$\frac{\rho_2}{\rho_1} = \left(\frac{p_2}{p_1}\right)^{1/\gamma}$$

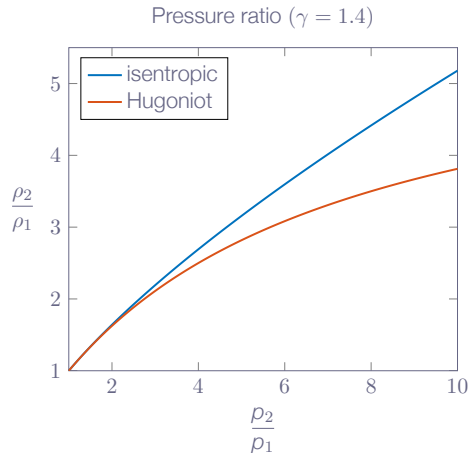

The Normal-shock Process

Note!


over the shock, the flow state changes discontinuously from 1 to 2 without passing any intermediate states

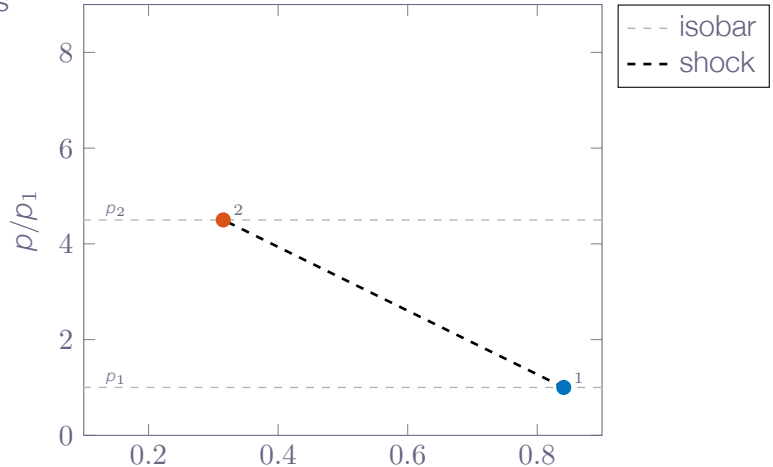


The Normal-shock Process

Note!

$$M_1 > 1.0 \text{ and } M_2 < 1.0 \Rightarrow T_1 < T^* < T_2$$

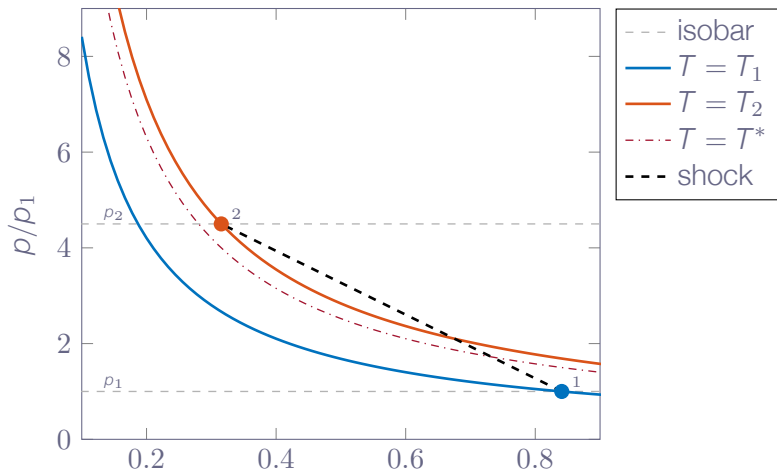


The Normal-shock Process

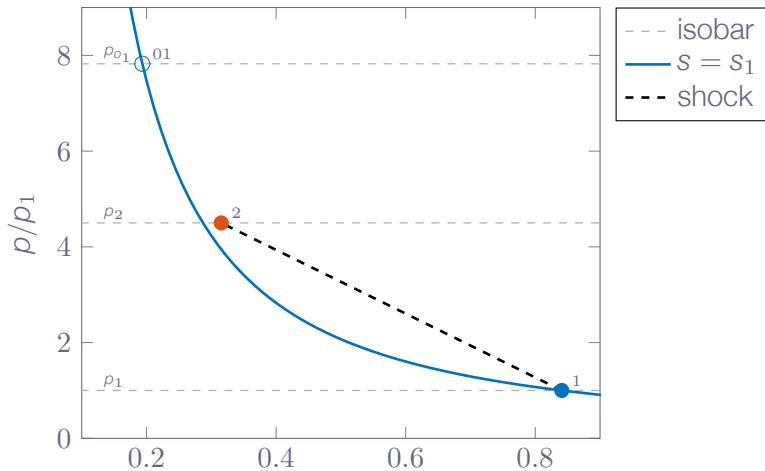


The Normal-shock Process

Note!

isotherms are less steep than isentropes $\Rightarrow p_{o2} < p_{o1}$

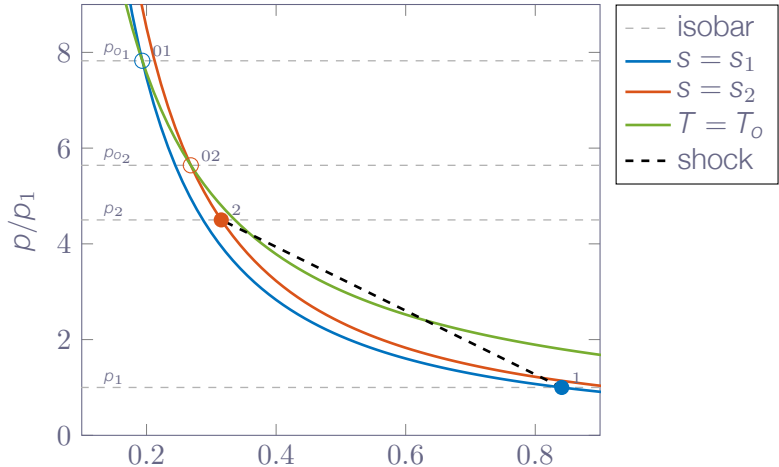

The Normal-shock Process

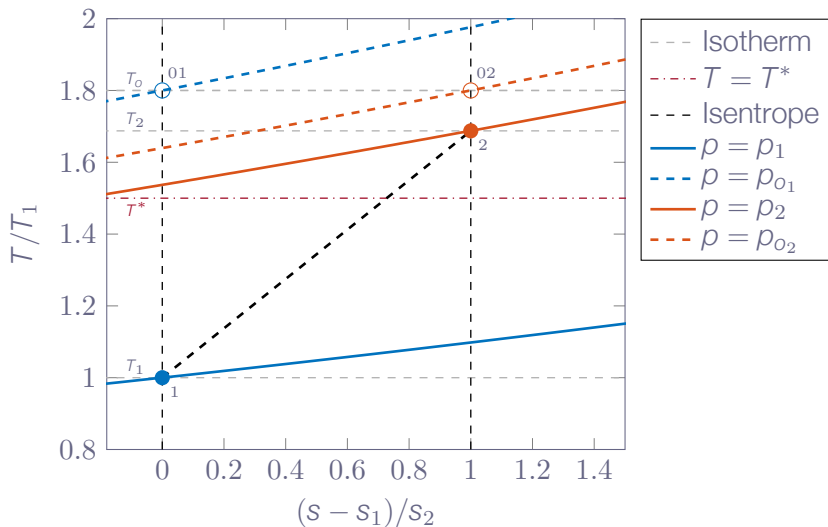

The Normal-shock Process

Continuity:

$$\rho_1 u_1 = \rho_2 u_2 = C > 0$$

Momentum:

$$p_1 + \rho_1 u_1^2 = p_2 + \rho_2 u_2^2 \Rightarrow p_1 + \frac{C^2}{\rho_1} = p_2 + \frac{C^2}{\rho_2} \Rightarrow p_1 + \nu_1 C^2 = p_2 + \nu_2 C^2$$

$$\frac{p_1 - p_2}{\nu_1 - \nu_2} = -C^2$$

a line in $p\nu$ -space with negative slope

The Normal-shock Process

Energy equation:

$$h_1 + \frac{u_1^2}{2} = h_2 + \frac{u_2^2}{2}$$

with $h = C_p T = \frac{\gamma R}{\gamma - 1} T$ and $u = \nu C$ we get


$$\frac{\gamma R}{\gamma - 1} T_1 + \frac{1}{2} \nu_1^2 C^2 = \frac{\gamma R}{\gamma - 1} T_2 + \frac{1}{2} \nu_2^2 C^2 \Rightarrow \dots \Rightarrow \frac{p_2}{p_1} \left(\frac{\nu_2}{\nu_1} - \frac{\gamma + 1}{\gamma - 1} \right) / \left(1 - \frac{\nu_2}{\nu_1} \frac{\gamma + 1}{\gamma - 1} \right)$$

quadratic function in $p\nu$ -space (Hugoniot curve)

only thermodynamic variables


The Normal-shock Process

$$M = 2.0 \quad (\gamma = 1.4)$$

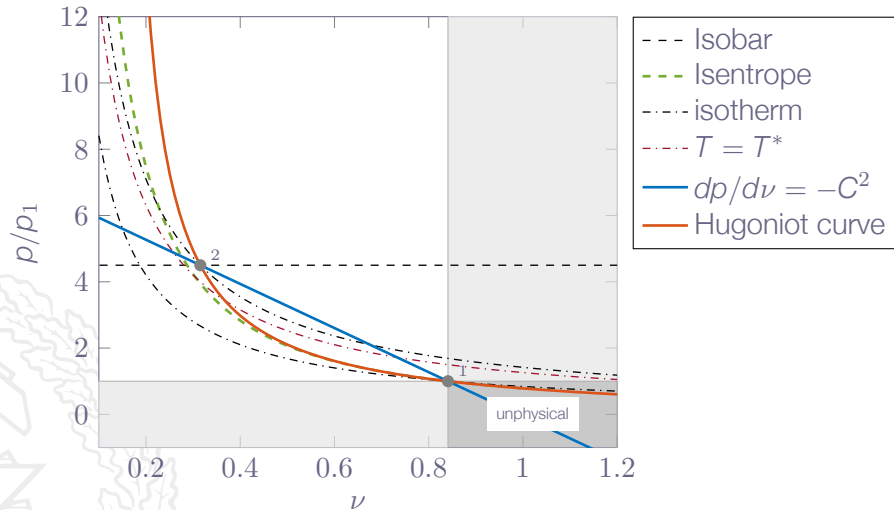


The Normal-shock Process

$$M = 2.5 \quad (\gamma = 1.4)$$

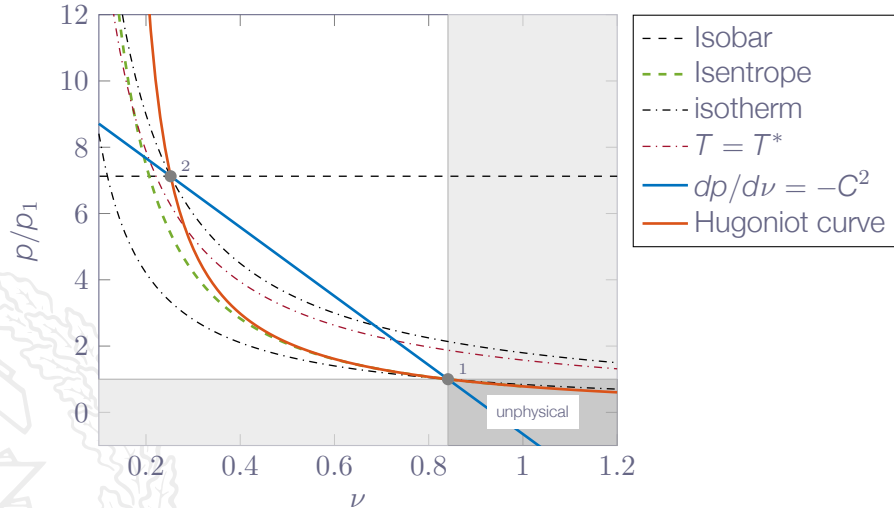


The Normal-shock Process

$$M = 3.0 \ (\gamma = 1.4)$$

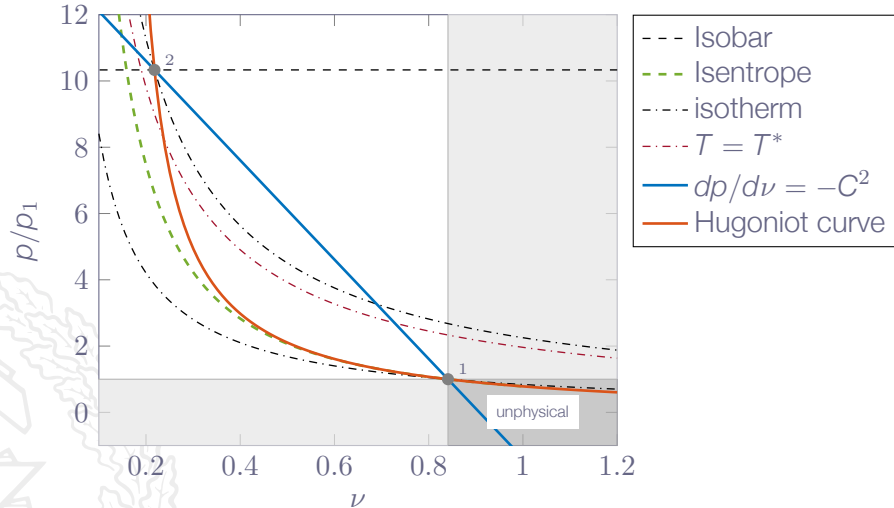

Roadmap - One-dimensional Flow

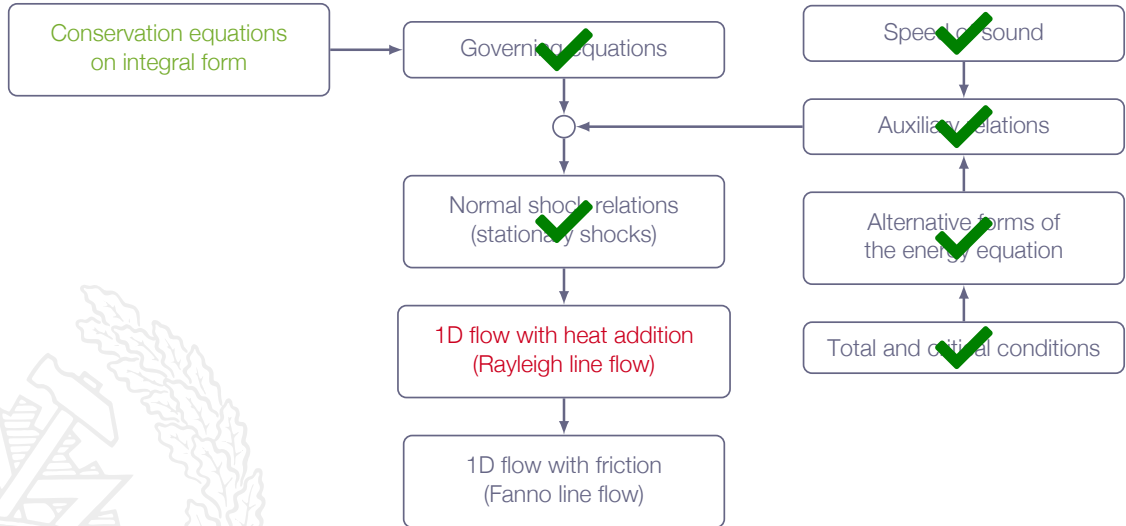


Chapter 3.8

One-Dimensional Flow with Heat Addition



One-Dimensional Flow with Heat Addition

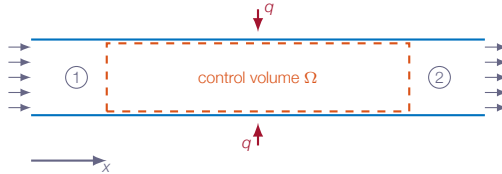

1D pipe flow with heat addition:

1. no friction
2. 1D steady-state $\Rightarrow$ all variables depend on x only
3. q is the amount of heat per unit mass added between 1 and 2
4. analyze by setting up a control volume between station 1 and 2

One-Dimensional Flow with Heat Addition

$$\rho_1 u_1 = \rho_2 u_2$$

$$\rho_1 u_1^2 + p_1 = \rho_2 u_2^2 + p_2$$

$$h_1 + \frac{1}{2}u_1^2 + \textcolor{red}{q} = h_2 + \frac{1}{2}u_2^2$$

Valid for all gases!

General gas $\Rightarrow$ Numerical solution necessary

Calorically perfect gas $\Rightarrow$ can be solved analytically

One-Dimensional Flow with Heat Addition

Calorically perfect gas ($h = C_p T$):

$$C_p T_1 + \frac{1}{2} u_1^2 + q = C_p T_2 + \frac{1}{2} u_2^2$$

$$q = \left(C_p T_2 + \frac{1}{2} u_2^2 \right) - \left(C_p T_1 + \frac{1}{2} u_1^2 \right)$$

$$C_p T_o = C_p T + \frac{1}{2} u^2 \Rightarrow$$

$$q = C_p (T_{o2} - T_{o1})$$

i.e. heat addition increases T_o downstream

One-Dimensional Flow with Heat Addition

Momentum equation:

$$p_2 - p_1 = \rho_1 u_1^2 - \rho_2 u_2^2$$

$$\left\{ \rho u^2 = \rho a^2 M^2 = \rho \frac{\gamma p}{\rho} M^2 = \gamma p M^2 \right\}$$

$$p_2 - p_1 = \gamma p_1 M_1^2 - \gamma p_2 M_2^2 \Rightarrow$$

$$\frac{p_2}{p_1} = \frac{1 + \gamma M_1^2}{1 + \gamma M_2^2}$$

Normal Shock Relations

We used the momentum equation to derive the relation for p_2/p_1 . In what way is this relation different than the one for normal shocks – the momentum equation is the same?



Normal Shock Relations

We used the momentum equation to derive the relation for p_2/p_1 . In what way is this relation different than the one for normal shocks – the momentum equation is the same?

Answer: There is no difference. If we would insert $M_2 = f(M_1)$ from the normal shock relations, we would end up with the normal shock relation for p_2/p_1 .

The relation for $M_2 = f(M_1)$ for normal shocks was derived assuming adiabatic flow

One-Dimensional Flow with Heat Addition

Ideal gas law:

$$T = \frac{p}{\rho R} \Rightarrow \frac{T_2}{T_1} = \frac{p_2}{p_1} \frac{\rho_1}{\rho_2} = \frac{\rho_2}{\rho_1} \frac{\rho_1}{\rho_2}$$

Continuity equation:

$$\rho_1 u_1 = \rho_2 u_2 \Rightarrow \frac{\rho_1}{\rho_2} = \frac{u_2}{u_1}$$

$$\frac{u_2}{u_1} = \frac{M_2 a_2}{M_1 a_1} = \frac{M_2 \sqrt{\gamma R T_2}}{M_1 \sqrt{\gamma R T_1}} \Rightarrow \frac{\rho_1}{\rho_2} = \frac{M_2}{M_1} \sqrt{\frac{T_2}{T_1}}$$

$$\frac{T_2}{T_1} = \left(\frac{1 + \gamma M_1^2}{1 + \gamma M_2^2} \right)^2 \left(\frac{M_2}{M_1} \right)^2$$

One-Dimensional Flow with Heat Addition

Calorically perfect gas, analytic solution:

$$\frac{T_2}{T_1} = \left[\frac{1 + \gamma M_1^2}{1 + \gamma M_2^2} \right]^2 \left(\frac{M_2}{M_1} \right)^2$$

$$\frac{\rho_2}{\rho_1} = \left[\frac{1 + \gamma M_2^2}{1 + \gamma M_1^2} \right] \left(\frac{M_1}{M_2} \right)^2$$

$$\frac{\rho_2}{\rho_1} = \frac{1 + \gamma M_1^2}{1 + \gamma M_2^2}$$



One-Dimensional Flow with Heat Addition

Calorically perfect gas, analytic solution:

$$\frac{\rho_{o2}}{\rho_{o1}} = \left[\frac{1 + \gamma M_1^2}{1 + \gamma M_2^2} \right] \left(\frac{1 + \frac{1}{2}(\gamma - 1)M_2^2}{1 + \frac{1}{2}(\gamma - 1)M_1^2} \right)^{\frac{\gamma}{\gamma-1}}$$

$$\frac{T_{o2}}{T_{o1}} = \left[\frac{1 + \gamma M_1^2}{1 + \gamma M_2^2} \right] \left(\frac{M_2}{M_1} \right)^2 \left(\frac{1 + \frac{1}{2}(\gamma - 1)M_2^2}{1 + \frac{1}{2}(\gamma - 1)M_1^2} \right)^{\frac{\gamma}{\gamma-1}}$$



One-Dimensional Flow with Heat Addition

Initially subsonic flow ($M < 1$)

the Mach number, M , increases as more heat (per unit mass) is added to the gas
for some limiting heat addition q^* , the flow will eventually become sonic $M = 1$

Initially supersonic flow ($M > 1$)

the Mach number, M , decreases as more heat (per unit mass) is added to the gas
for some limiting heat addition q^* , the flow will eventually become sonic $M = 1$

Note! The (*) condition in this context is not the same as the "critical" condition discussed for isentropic flow

One-Dimensional Flow with Heat Addition

$$\frac{p_2}{p_1} = \frac{1 + \gamma M_1^2}{1 + \gamma M_2^2}$$

Calculate the ratio between the pressure at a specific location in the flow p and the pressure at sonic conditions p^*

$$p_1 = p, M_1 = M, p_2 = p^*, \text{ and } M_2 = 1$$

$$\frac{p^*}{p} = \frac{1 + \gamma M^2}{1 + \gamma}$$

One-Dimensional Flow with Heat Addition

$$\frac{T}{T^*} = \left[\frac{1 + \gamma}{1 + \gamma M^2} \right]^2 M^2$$

$$\frac{p_o}{p_o^*} = \left[\frac{1 + \gamma}{1 + \gamma M^2} \right] \left(\frac{2 + (\gamma - 1)M^2}{(\gamma + 1)} \right)^{\frac{\gamma}{\gamma - 1}}$$

$$\frac{\rho}{\rho^*} = \left[\frac{1 + \gamma M^2}{1 + \gamma} \right] \left(\frac{1}{M^2} \right)$$

$$\frac{T_o}{T_o^*} = \frac{(\gamma + 1)M^2}{(1 + \gamma M^2)^2} (2 + (\gamma - 1)M^2)$$

$$\frac{p}{p^*} = \frac{1 + \gamma}{1 + \gamma M^2}$$


One-Dimensional Flow with Heat Addition

Amount of heat per unit mass needed to choke the flow:

$$q^* = C_p(T_o^* - T_o) = C_p T_o \left(\frac{T_o^*}{T_o} - 1 \right)$$



One-Dimensional Flow with Heat Addition

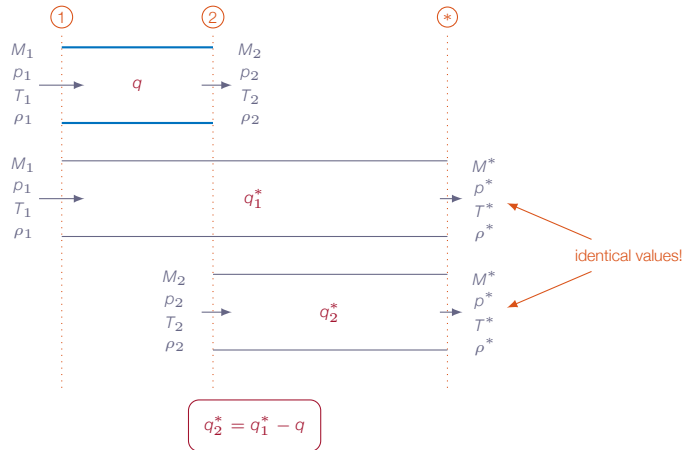

Note! for a given flow, the starred quantities are constant values


One-Dimensional Flow with Heat Addition



Lord Rayleigh 1842-1919
Nobel prize in physics 1904

Note! it is theoretically possible to heat an initially subsonic flow to reach sonic conditions and then continue to accelerate the flow by cooling

$$\Delta S = \frac{\Delta s}{C_p} = \ln \left[M^2 \left(\frac{\gamma + 1}{1 + \gamma M^2} \right)^{\frac{\gamma + 1}{\gamma}} \right]$$
$$H = \frac{h}{h^*} = \frac{C_p T}{C_p T^*} = \frac{T}{T^*} = \left[\frac{(\gamma + 1)M}{1 + \gamma M^2} \right]^2$$

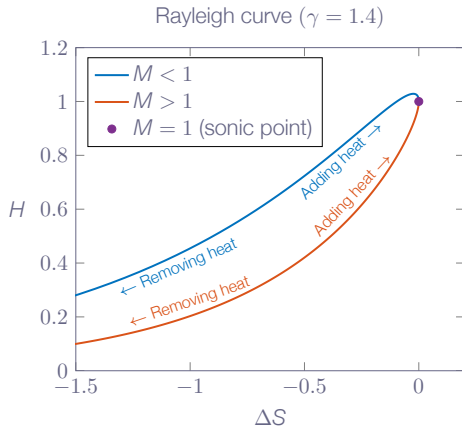

One-Dimensional Flow with Heat Addition

And now, the million-dollar question ...



One-Dimensional Flow with Heat Addition

And now, the million-dollar question ...

Removing heat seems to reduce the entropy. Isn't that a violation of the second law of thermodynamics?!




One-Dimensional Flow with Heat Addition

And now, the million-dollar question ...

Removing heat seems to reduce the entropy. Isn't that a violation of the second law of thermodynamics?!

Answer: if the heat source or sink would have been included in the system studied, the system entropy would increase both when adding and removing heat.

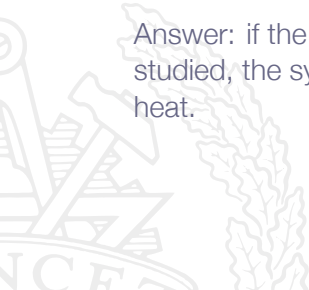

One-Dimensional Flow with Heat Addition

$M < 1$: Adding heat will

increase M
decrease p
increase T_o
decrease p_o
increase s
increase u
decrease ρ

$M > 1$: Adding heat will


decrease M
increase p
increase T_o
decrease p_o
increase s
decrease u
increase ρ

Note! the flow is not isentropic, there will always be losses

The Rayleigh-flow Process

Unlike the normal shock, Rayleigh flow has **continuous** solutions



A small addition of heat δq will change flow properties slightly

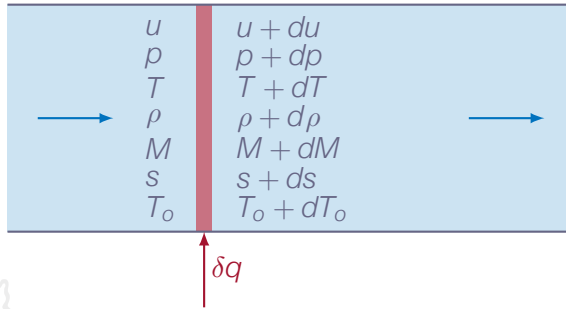

The Rayleigh-flow Process - Subsonic Heat Addition

Note!



Heat addition moves the H-curve in the direction of increasing pressure and increasing specific volume

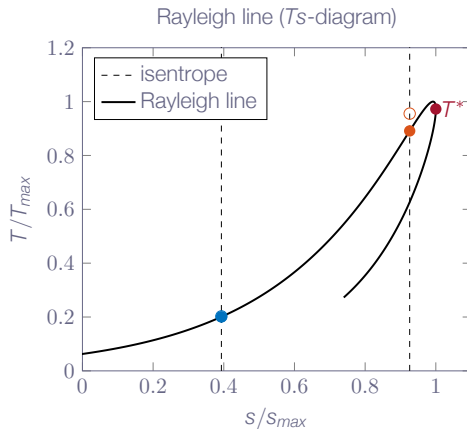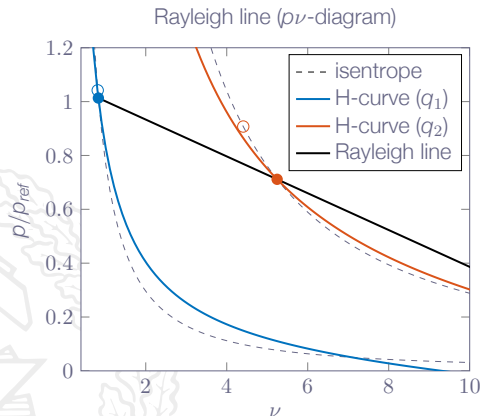

The Rayleigh-flow Process - Choked Subsonic Flow

Note!

When $q = q^*$, the H-curve is tangent to the Rayleigh line (thermal choking)
Further heat addition will move the H-curve away from the Rayleigh line

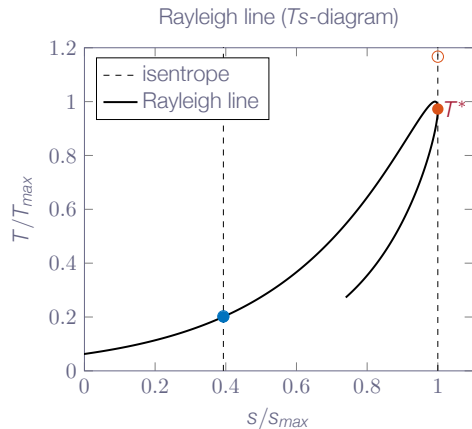
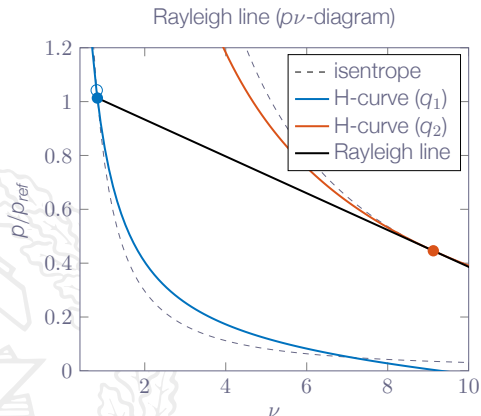


The Rayleigh-flow Process - Choked Subsonic Flow

Note!

If it is added such that $q > q^*$, the inlet static flow properties will change (new mass-flow) such that the new q^* is equal to the added heat q



Total flow properties at the inlet remains the same (only work or heat addition can change the total flow properties)

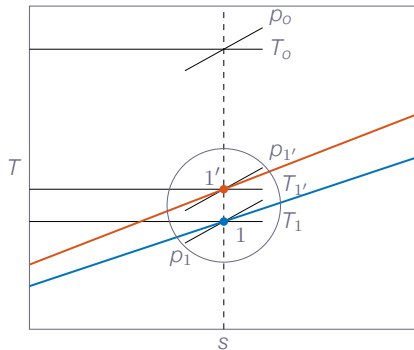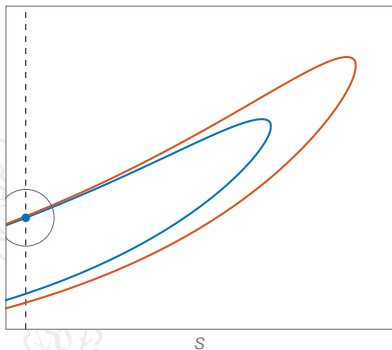

The Rayleigh-flow Process - Supersonic Heat Addition

Note!



A supersonic flow is in general closer to thermal choking than a subsonic flow due to the high energy level (and thereby high T_o)

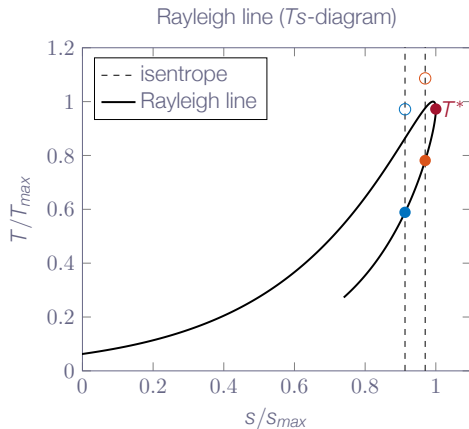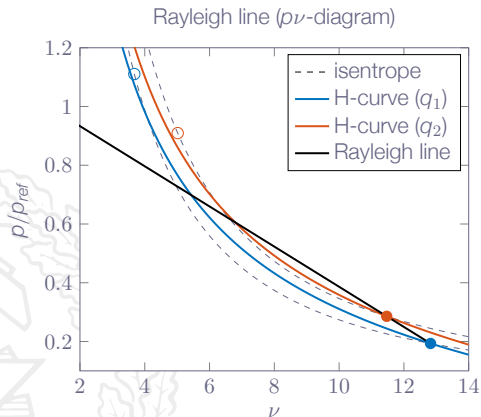

The Rayleigh-flow Process - Choked Supersonic Flow

Note!

When heat is added to a thermally choked supersonic flow, a shock will be generated at the exit of the pipe

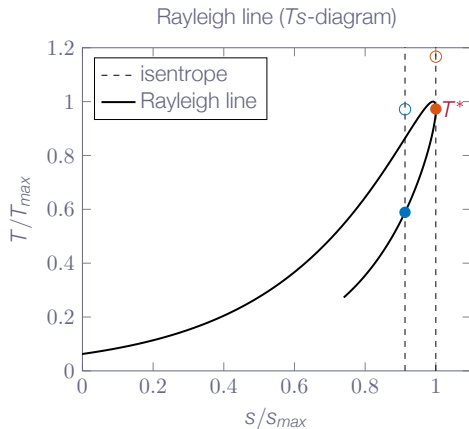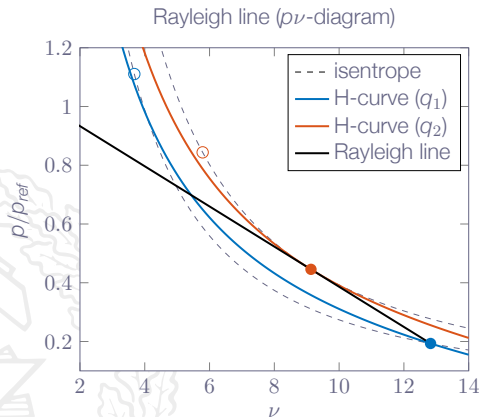

The Rayleigh-flow Process - Choked Supersonic Flow

The shock generated at the exit will be infinitely weak ($M = 1$)

As the shock does not affect T_o , T^* , p^* etc, it does not affect the thermal choking condition (remember: T^* and p^* are **not the critical conditions**)

The heat process and the normal shock process operates along the **same line** in $p\nu$ -space

The shock will travel upstream through the pipe

If the supersonic flow is generated in a convergent-divergent nozzle, the shock will propagate upstream in the nozzle until the resulting pipe inlet condition allows for the heat to be added with thermal choking at the pipe exit


The Rayleigh-flow Process - Maximum Temperature

It can be showed that $\frac{dT}{ds} = \frac{1 - \gamma M^2}{1 - M^2} \frac{T}{C_p}$



$$\frac{dT}{ds} = 0 \Rightarrow M = \sqrt{\frac{1}{\gamma}}$$

we will have the maximum temperature for a subsonic Mach number

$$M = 1.0 \Rightarrow \frac{dT}{ds} = \infty$$

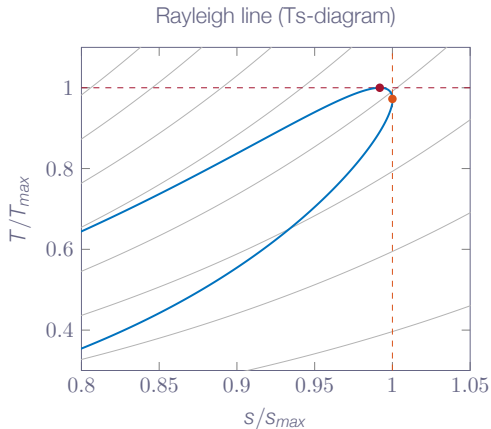


Rayleigh Flow Trends

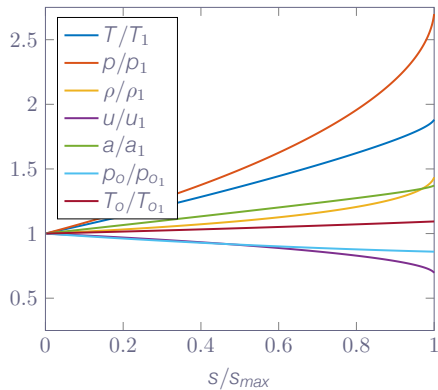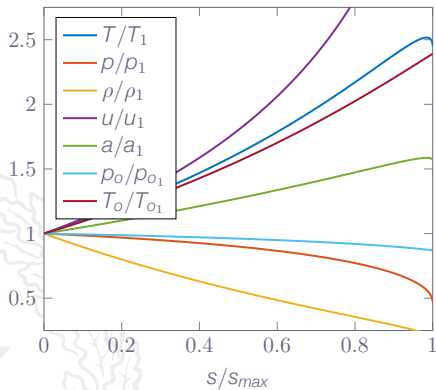

One-Dimensional Flow with Heat Addition

Relation between added heat per unit mass (q) and heat per unit surface area and unit time ($\dot{q}_{wall}$)

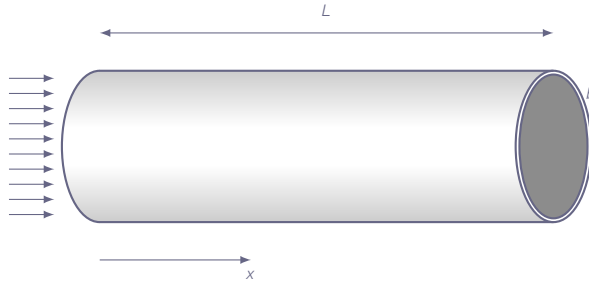

Pipe with arbitrary cross section (constant in x):


mass flow through pipe $\dot{m}$

axial length of pipe L


circumference of pipe $b = 2\pi r$

$$q = \frac{Lb\dot{q}_{wall}}{\dot{m}}$$

One-Dimensional Flow with Heat Addition - RM12

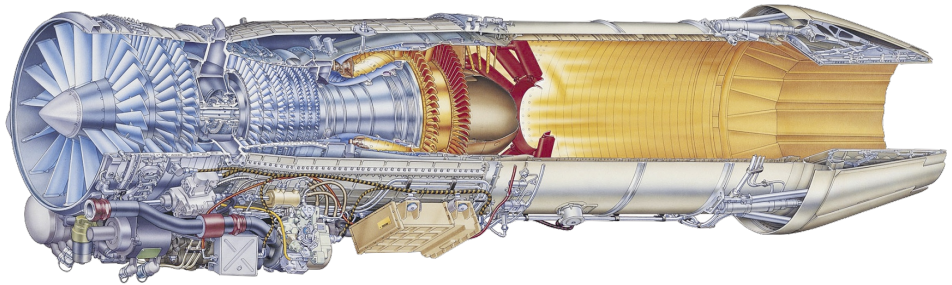

Roadmap - One-dimensional Flow

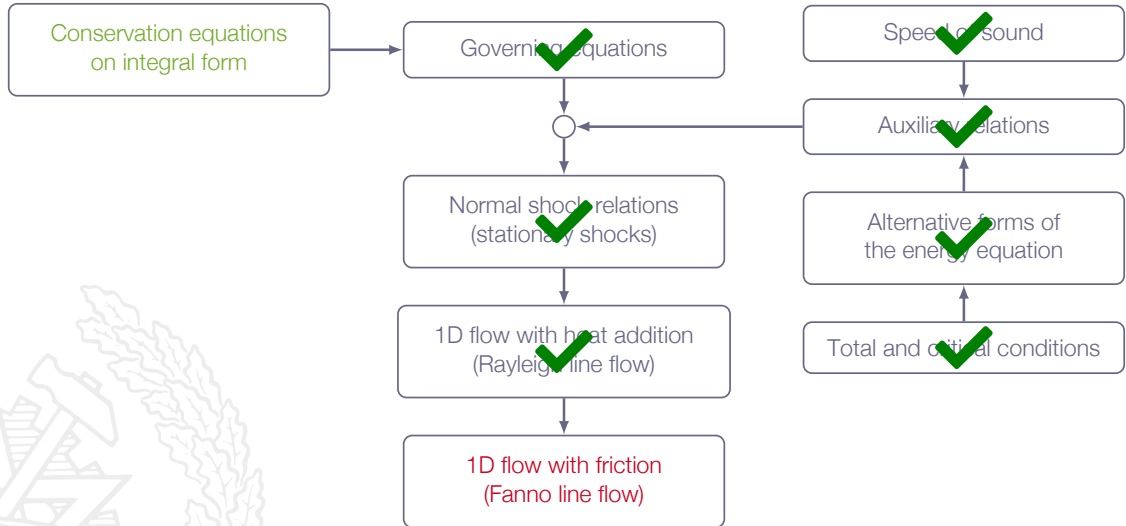

Chapter 3.9

One-Dimensional Flow with Friction




One-Dimensional Flow with Friction

inviscid flow with friction?!



One-Dimensional Flow with Friction

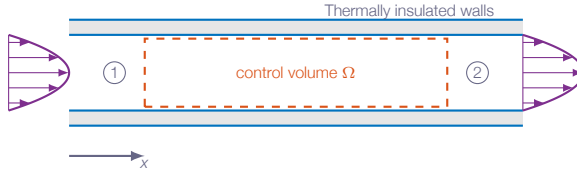

1D pipe flow with friction:


1. adiabatic ($q = 0$)
2. cross section area A is constant
3. average all variables in each cross-section $\Rightarrow$ only x -dependence
4. analyze by setting up a control volume between station 1 and 2

One-Dimensional Flow with Friction

Wall-friction contribution in momentum equation

$$\oint_{\partial\Omega} \tau_w dS = b \int_0^L \tau_w dx$$

where L is the tube length and b is the circumference

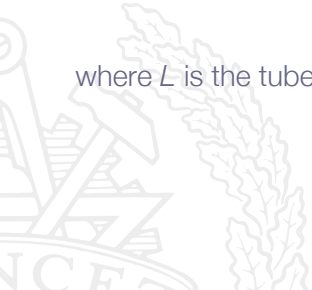

One-Dimensional Flow with Friction

$$\rho_1 u_1 = \rho_2 u_2$$

$$\rho_1 u_1^2 + p_1 - \frac{4}{D} \int_0^L \tau_w dx = \rho_2 u_2^2 + p_2$$

$$h_1 + \frac{1}{2} u_1^2 = h_2 + \frac{1}{2} u_2^2$$



One-Dimensional Flow with Friction

τ_w varies with the distance x and thus complicating the integration

Solution: let L shrink to dx and we end up with relations on differential form

$$d(\rho u^2 + p) = -\frac{4}{D}\tau_w dx \Leftrightarrow \frac{d}{dx}(\rho u^2 + p) = -\frac{4}{D}\tau_w$$



One-Dimensional Flow with Friction

From the continuity equation we get

$$\rho_1 u_1 = \rho_2 u_2 = \text{const} \Rightarrow \frac{d}{dx}(\rho u) = 0$$

Writing out all terms in the momentum equation gives

$$\frac{d}{dx}(\rho u^2 + p) = \rho u \frac{du}{dx} + u \underbrace{\frac{d}{dx}(\rho u)}_{=0} + \frac{dp}{dx} = -\frac{4}{D}\tau_w \Rightarrow \rho u \frac{du}{dx} + \frac{dp}{dx} = -\frac{4}{D}\tau_w$$

Common approximation for τ_w :

$$\tau_w = f \frac{1}{2} \rho u^2 \Rightarrow \rho u \frac{du}{dx} + \frac{dp}{dx} = -\frac{2}{D} \rho u^2 f$$

One-Dimensional Flow with Friction

Energy conservation:

$$h_{o1} = h_{o2} \Rightarrow \frac{d}{dx}h_o = 0$$



One-Dimensional Flow with Friction

Summary:

$$\frac{d}{dx}(\rho u) = 0$$

$$\rho u \frac{du}{dx} + \frac{dp}{dx} = -\frac{2}{D} \rho u^2 f$$

$$\frac{d}{dx} h_o = 0$$

Valid for all gases!

General gas $\Rightarrow$ Numerical solution necessary

Calorically perfect gas $\Rightarrow$ Can be solved analytically (for constant f)

One-Dimensional Flow with Friction

Calorically perfect gas:

$$\int_{x_1}^{x_2} \frac{4f}{D} dx = \left[-\frac{1}{\gamma M^2} - \frac{\gamma + 1}{2\gamma} \ln \left(\frac{M^2}{1 + \frac{\gamma - 1}{2} M^2} \right) \right]_{M_1}^{M_2}$$



One-Dimensional Flow with Friction

Calorically perfect gas and adiabatic flow:

$$\frac{T_2}{T_1} = \frac{T_2}{T_{o2}} \frac{T_{o2}}{T_{o1}} \frac{T_{o1}}{T_1} = \{T_o = \text{const}\} = \frac{T_2}{T_o} \frac{T_o}{T_1} = \frac{2 + (\gamma - 1)M_1^2}{2 + (\gamma - 1)M_2^2}$$

Continuity:

$$\frac{\rho_2}{\rho_1} = \frac{u_1}{u_2} = \frac{a_1 M_1}{a_2 M_2} = \left\{ a = \sqrt{\gamma R T} \right\} = \sqrt{\frac{T_1}{T_2}} \left(\frac{M_1}{M_2} \right)$$

Perfect gas:

$$\frac{p_2}{p_1} = \{p = \rho R T\} = \frac{\rho_2 T_2}{\rho_1 T_1}$$

Total pressure:

$$\frac{p_{o2}}{p_{o1}} = \frac{p_{o2}}{p_2} \frac{p_2}{p_1} \frac{p_1}{p_{o1}}$$

One-Dimensional Flow with Friction

Calorically perfect gas:

$$\frac{T_2}{T_1} = \frac{2 + (\gamma - 1)M_1^2}{2 + (\gamma - 1)M_2^2}$$

$$\frac{\rho_2}{\rho_1} = \frac{M_1}{M_2} \left[\frac{2 + (\gamma - 1)M_1^2}{2 + (\gamma - 1)M_2^2} \right]^{-1/2}$$

$$\frac{p_2}{p_1} = \frac{M_1}{M_2} \left[\frac{2 + (\gamma - 1)M_1^2}{2 + (\gamma - 1)M_2^2} \right]^{1/2}$$

$$\frac{p_{o2}}{p_{o1}} = \frac{M_1}{M_2} \left[\frac{2 + (\gamma - 1)M_2^2}{2 + (\gamma - 1)M_1^2} \right]^{\frac{\gamma+1}{2(\gamma-1)}}$$

One-Dimensional Flow with Friction

Initially subsonic flow ($M_1 < 1$)

M_2 will increase as L increases

for a critical length L^* , the flow at point 2 will reach sonic conditions, i.e. $M_2 = 1$

Initially supersonic flow ($M_1 > 1$)

M_2 will decrease as L increases

for a critical length L^* , the flow at point 2 will reach sonic conditions, i.e. $M_2 = 1$

Note! The (*) condition in this context is not the same as the "critical" condition discussed for isentropic flow

One-Dimensional Flow with Friction

$$\frac{T}{T^*} = \frac{(\gamma + 1)}{2 + (\gamma - 1)M^2}$$

$$\frac{\rho}{\rho^*} = \frac{1}{M} \left[\frac{2 + (\gamma - 1)M^2}{\gamma + 1} \right]^{1/2}$$

$$\frac{p}{p^*} = \frac{1}{M} \left[\frac{\gamma + 1}{2 + (\gamma - 1)M^2} \right]^{1/2}$$

$$\frac{p_o}{p_o^*} = \frac{1}{M} \left[\frac{2 + (\gamma - 1)M^2}{\gamma + 1} \right]^{\frac{\gamma+1}{2(\gamma-1)}}$$

see Table A.4

One-Dimensional Flow with Friction

and

$$\int_0^{L^*} \frac{4f}{D} dx = \left[-\frac{1}{\gamma M^2} - \frac{\gamma + 1}{2\gamma} \ln \left(\frac{M^2}{1 + \frac{\gamma - 1}{2} M^2} \right) \right]_M^1$$

where L^* is the tube length needed to change current state to sonic conditions

Let $\bar{f}$ be the average friction coefficient over the length $L^* \Rightarrow$

$$\frac{4\bar{f}L^*}{D} = \frac{1 - M^2}{\gamma M^2} + \frac{\gamma + 1}{2\gamma} \ln \left(\frac{(\gamma + 1)M^2}{2 + (\gamma - 1)M^2} \right)$$

Turbulent pipe flow $\rightarrow \bar{f} \sim 0.005$ ($Re > 10^5$, roughness $\sim 0.001D$)


One-Dimensional Flow with Friction - Choking Length

Note!

Supersonic flow is much more prone to choke than subsonic flow

There is an upper limit for supersonic choking length L^*


$$\left. \frac{4\bar{f}L^*}{D}(M_1) \right|_{M_1 \rightarrow \infty} = \frac{1}{\gamma} + \left(\frac{\gamma + 1}{2\gamma} \right) \ln \left(\frac{\gamma + 1}{\gamma - 1} \right)$$

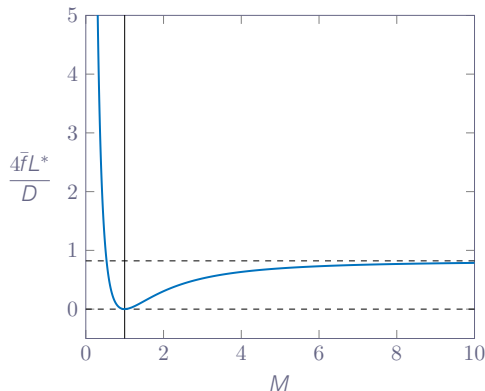

One-Dimensional Flow with Friction

$$H = \frac{h}{h_o} = \frac{C_p T}{C_p T_o} = \frac{T}{T_o} = \left[1 + \frac{\gamma - 1}{2} M^2 \right]^{-1}$$

$$\Delta S = \frac{\Delta s}{C_p} = \ln \left[\left(\frac{1}{H} - 1 \right)^{\frac{\gamma-1}{2\gamma}} \left(\frac{2}{\gamma-1} \right)^{\frac{\gamma-1}{2\gamma}} \left(\frac{\gamma+1}{2} \right)^{\frac{\gamma+1}{2\gamma}} (H)^{\frac{\gamma+1}{2\gamma}} \right]$$

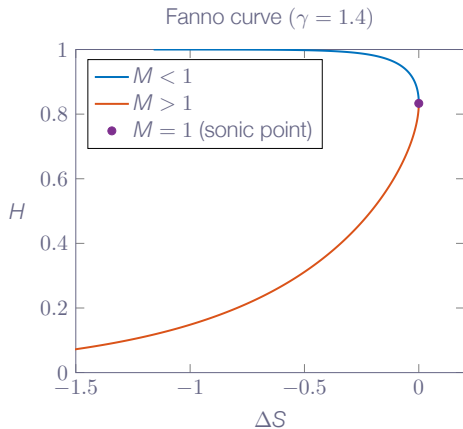

One-Dimensional Flow with Friction

$M < 1$: Friction will

increase M
decrease p
decrease T
decrease p_o
increase s
increase u
decrease ρ

$M > 1$: Friction will


decrease M
increase p
increase T
decrease p_o
increase s
decrease u
increase ρ

Note! the flow is not isentropic, there will always be losses

The Fanno-flow Process

Just like the Rayleigh flow, Fanno flow has **continuous** solutions


A small pipe section with length dx will change flow properties slightly

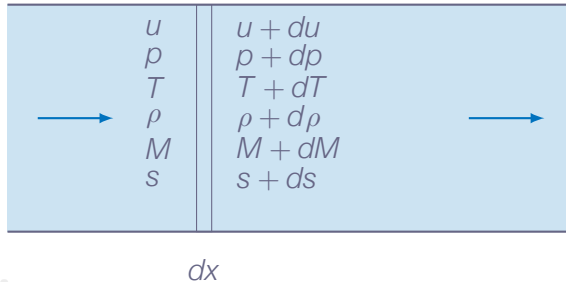

The Fanno-flow Process - Subsonic Flow

Note!


Pressure and temperature decreases when friction is added to a subsonic flow

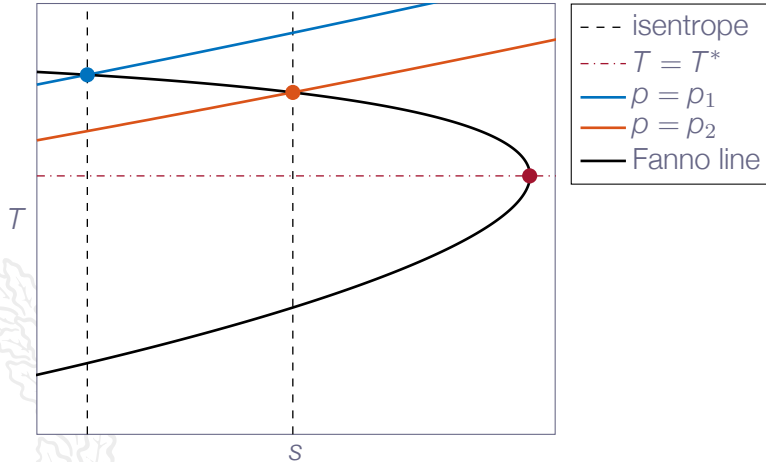

The Fanno-flow Process - Subsonic Flow

Note!

The Fanno flow process is adiabatic $\Rightarrow T_o$ is constant $\Rightarrow p_o$ increases


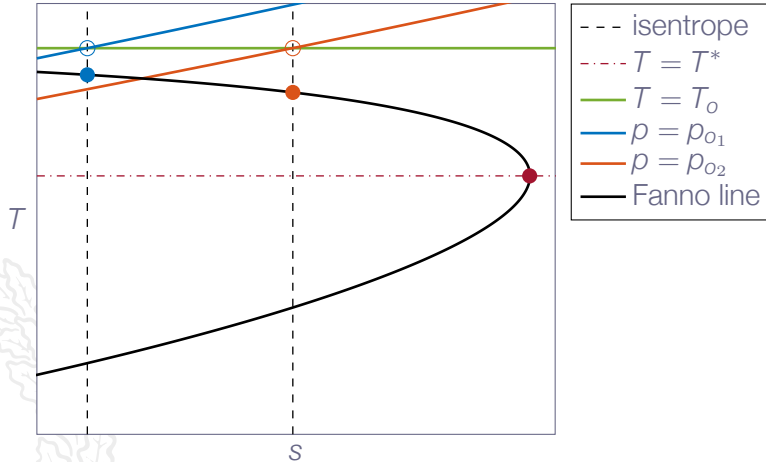


The Fanno-flow Process - Choked Subsonic Flow

Note!

If the pipe length is increased such that $L > L^*$, the inlet static flow properties will change (new massflow) such that the new L^* is equal to the pipe length


Total flow properties at the inlet remains the same (only work or heat addition can change the total flow properties)

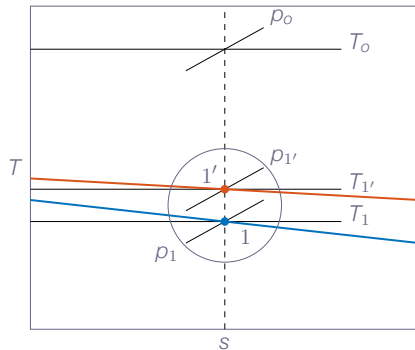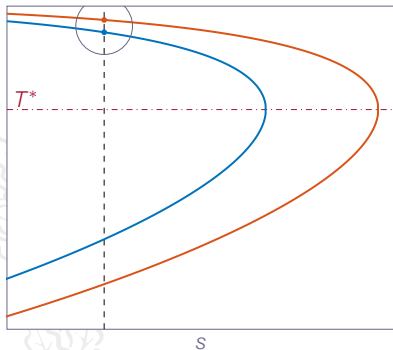

The Fanno-flow Process - Choked Supersonic

Note!

Choked supersonic flow will lead to the formation of a shock inside the pipe (shock location depends on flow conditions)

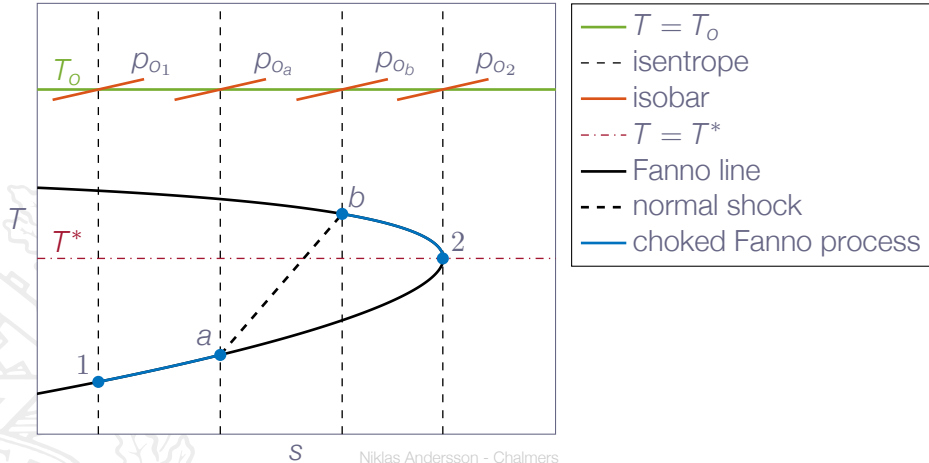

The Fanno-flow Process - Choked Supersonic

Why does the normal shock change the choking condition for Fanno flow but not for Rayleigh flow?

As for Rayleigh flow, T_o , T^* , p^* , etc are not affected by the shock

The **momentum equation is not the same** as for normal shocks $\Rightarrow$ the Fanno-flow process does not operate along the same line as the normal-shock process in $p\nu$ -space

The Fanno-flow Process - Choked Supersonic


Note!

An internal shock will always increase the choking length L^*



$$L_1^* = f(M_1)$$

$$\left. \begin{array}{l} L_2^* = f(M_2) \\ M_2 = f(M_1) \end{array} \right\} \Rightarrow L_2^* = f(M_1)$$

$$L_2^* - L_1^* = f(M_1)$$

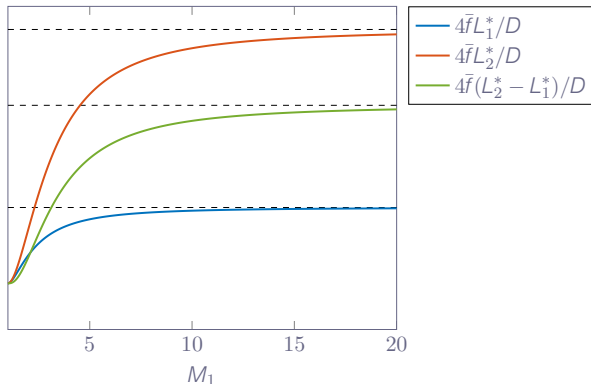

Friction Choking vs Thermal Choking

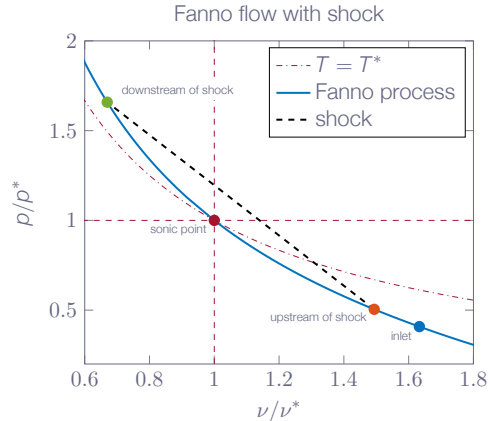
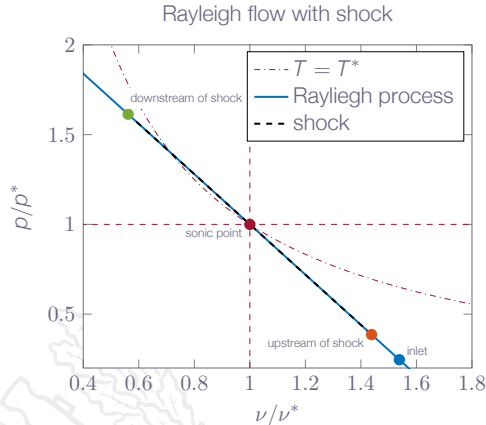


Rayleigh flow: a shock does not affect T_o^* or $T_o \Rightarrow q^*$ will not change over the shock

Fanno flow: L^* changes discontinuously over the shock $\Rightarrow$

L^* will always increase over a shock $\Rightarrow$ possible to extend pipe for supersonic flow


Fanno-flow Trends

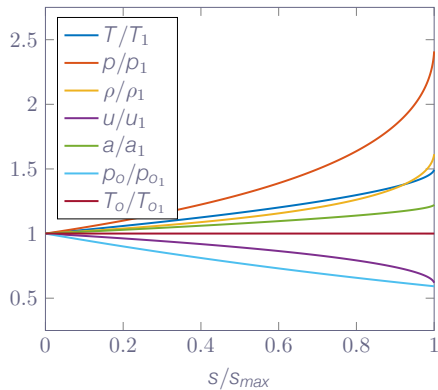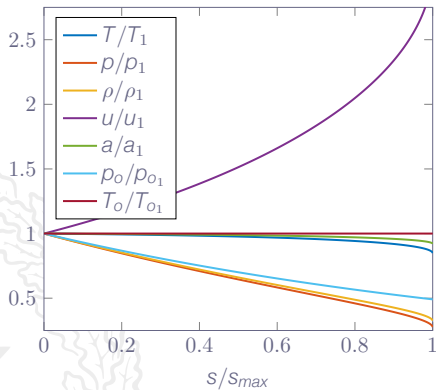

One-Dimensional Flow with Friction - Pipeline



Roadmap - One-dimensional Flow

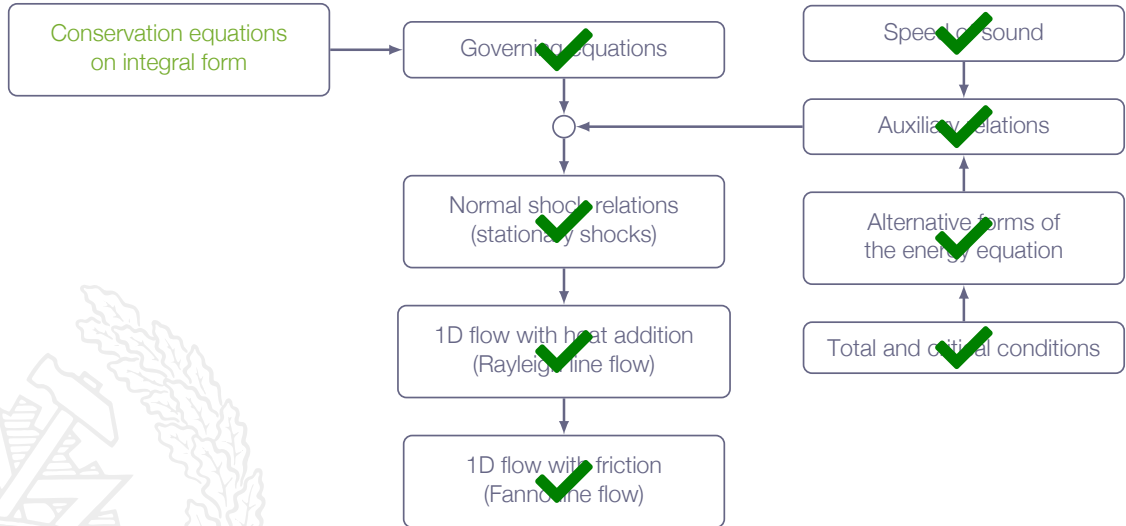


What if you somehow managed to make a stereo travel at twice the speed of sound, would it sound backwards to someone who was just casually sitting somewhere as it flies by?

—Tim Currie

Yes.

Technically, anyway. It would be pretty hard to hear.

The basic idea is pretty straightforward. The stereo is going faster than its own sound, so it will reach you first, followed by the sound it emitted one second ago, followed by the sound it emitted two seconds ago, and so forth.

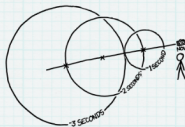

The problem is that the stereo is moving at Mach 2, which means that two seconds ago, it was over a kilometer away. It's hard to hear music from that distance, particularly when your ears were just hit by (a) a sonic boom, and (b) pieces of a rapidly disintegrating stereo.

Wind speeds of Mach 2 would messily disassemble most consumer electronics. The force of the wind on the body of the stereo is roughly comparable to that of a dozen people standing on it:

